

# Eaton Fuller® Heavy-Duty Transmissions TRTS0910

October 2007



*Powering Business Worldwide*

BACKED BY

**Roadranger**

SUPPORT

## Models

FR-11210B	RTLO-14610B	RTLOF-15610B-T2	RTOF-11909MLL	RTX-14709A
FR-12210B	RTLO-14610B-T2	RTLOF-16610B	RTOF-13707DLL	RTX-14709B
FR-13210B	RTLO-14613B	RTLOF-16610B-T2	RTOF-13707MLL	RTX-14709H
FR-14210B	RTLO-14618A	RTLOF-16618A	RTOF-14608LL	RTX-14710B
FR-15210B	RTLO-14713A	RTXF-15615	RTOF-14708LL	RTX-14710C
FR-9210B	RTLO-14718B	RTLOF-16713A	RTOF-14709MLL	RTX-14715
FRF-11210B	RTLO-14913A	RTLOF-16713A-T2	RTOF-14908LL	RTX-15615
FRF-12210B	RTLO-14918B	RTLOF-16718B	RTOF-14909ALL	RTXF-16709H
FRF-13210B	RTLO-14918B-T2	RTLOF-16913A	RTOF-14909MLL	RTX-15710B
FRF-14210B	RTLO-15610B	RTLOF-16913A-T2	RTOF-16908LL	RTX-15710C
FRF-15210B	RTLO-15610B-T2	RTLOF-16918B	RTOF-16909ALL	RTX-15715
FRF-9210B	RTLO-16610B	RTLOF-16918B-T2	RTX-11509	RTX-16709B
FRO-11210B	RTLO-16610B-T2	RTLOF-17610B	RTX-11608LL	RTX-16709H
FRO-11210C	RTLO-16618A	RTLOF-17610B-T2	RTX-11609A	RTX-16710B
FRO-12210B	RTXF-14710C	RTLOF-18610B	RTX-11609B	RTX-16710C
FRO-12210C	RTLO-16713A	RTLOF-18718B	RTX-11609P	RTXF-11509
FRO-13210B	RTLO-16713A-T2	RTLOF-18913A	RTX-11609R	RTXF-11608LL
FRO-13210C	RTLO-16718B	RTLOF-18913A-T2	RTXF-15715	RTXF-11609A
FRO-14210B	RTLO-16913A	RTLOF-18918B	RTX-11610	RTXF-11609B
FRO-14210C	RTLO-16913A-T2	RTLOF-18918B-T2	RTX-11615	RTXF-11609P
FRO-15210B	RTLO-16918B	RTLOF-20913A	RTX-11708LL	RTXF-11609R
FRO-15210C	RTLO-16918B-T2	RTLOF-20918B	RTX-11709A	RTXF-11610
RTXF-14615	RTLO-17610B	RTLOF-20918B-T2	RTX-11709B	RTXF-11615
RTXF-14708LL	RTLO-17610B-T2	RTLOF-22918B	RTX-11709H	RTXF-11708LL
FRO-16210B	RTLO-18610B	RTLOFC-16909A-T2	RTX-11710B	RTXF-11709H
FRO-16210C	RTLO-18610B-T2	RTO-11607L	RTX-11710C	RTXF-11710B
FRO-17210C	RTLO-18718B	RTO-11607L	RTX-11715	RTXF-11710C
FRO-18210C	RTLO-18718B-T2	RTXF-15710B	RTX-12509	RTXF-11715
FROF-11210B	RTLO-18913A	RTO-11607LL	RTX-12510	RTXF-12509
FROF-11210C	RTLO-18913A-T2	RTO-11607LL	RTX-12515	RTXF-12510
FROF-12210B	RTLO-18918B	RTO-11608LL	RTX-12609A	RTXF-16710B
FROF-12210C	RTLO-18918B-T2	RTO-11707DLL	RTX-12609B	RTXF-12515
FROF-13210B	RTLO-20913A	RTO-11707LL	RTX-12609P	RTXF-12609A
FROF-13210C	RTLO-20918B	RTO-11708LL	RTX-12609R	RTXF-12609B
FROF-14210B	RTLO-20918B-T2	RTO-11709MLL	RTX-12610	RTXF-12609P
FROF-14210C	RTLO-22918B	RTO-11908LL	RTX-12709A	RTXF-12609R
FROF-15210B	RTLOC-16909A-T2	RTO-11909ALL	RTX-12709B	RTXF-12610
FROF-15210C	RTXF-14715	RTO-11909MLL	RTX-12709H	RTXF-12709H
FROF-16210B	RTLOF-11610B	RTO-13707DLL	RTX-12710B	RTXF-12710B
FROF-16210C	RTLOF-11610B-T2	RTO-13707MLL	RTX-12710C	RTXF-12710C
RT-7608LL	RTLOF-12610B	RTO-14608LL	RTXF-16709B	RTXF-13609A
RT-8608L	RTLOF-12610B-T2	RTO-14709MLL	RTX-13609A	RTXF-13609B
RT-8908LL	RTLOF-12713A	RTO-14908LL	RTX-13609B	RTXF-13609P
RTF-8608L	RTLOF-12913A	RTO-14909ALL	RTX-13609P	RTXF-13609R
RTF-8908LL	RTLOF-13610B	RTO-14909MLL	RTX-13609R	RTXF-13709H
RTLO-11610B	RTLOF-13610B-T2	RTO-16908LL	RTX-13709H	RTXF-13710B
RTXF-14709H	RTLOF-14610B	RTO-16909ALL	RTX-13710B	RTXF-13710C
RTXF-14710B	RTLOF-14610B-T2	RTOF-11607L	RTX-13710C	RTXF-14608LL
RTLO-11610B-T2	RTLOF-14613B	RTOF-11607LL	RTX-14608LL	RTXF-14609A
RTLO-12610B	RTLOF-14618A	RTOF-11608LL	RTX-14609A	RTXF-14609B
RTLO-12610B-T2	RTLOF-14713A	RTXF-15710C	RTX-14609B	RTXF-14609P
RTLO-12713A	RTLOF-14718B	RTOF-11707LL	RTX-14609P	RTXF-14609R
RTLO-12913A	RTLOF-14913A	RTOF-11708LL	RTX-14609R	RTXF-14610
RTLO-13610B	RTLOF-14918B	RTOF-11709MLL	RTX-14610	RTXF-16710C
RTLO-13610B-T2	RTLOF-14918B-T2	RTOF-11908LL	RTX-14615	
RTLO-14610A	RTLOF-15610B	RTOF-11909ALL	RTX-14708LL	



Before starting a vehicle always be seated in the drivers seat, place the transmission in neutral, set the parking brakes and disengage the clutch.

Before working on a vehicle place the transmission in neutral, set the parking brakes and block the wheels.

Before towing the vehicle place the transmission in neutral, and lift the rear wheels off the ground or disconnect the driveline to avoid damage to the transmission during towing.



# TABLE OF CONTENTS

---

FORWARD .....	1
POWER FLOW .....	2
TIMING .....	4
COMMON TRANSMISSION COMPLAINTS .....	5
GEARS AND SHAFTS .....	10
BEARINGS .....	13
TRANSMISSION ALIGNMENT .....	16
DRIVELINE ANGULARITY .....	18
PREVENTIVE MAINTENANCE .....	22
LUBRICATION .....	26
TORQUE RECOMMENDATIONS .....	28
TROUBLESHOOTER’S GUIDELINE CHART .....	30
CONVERSION TABLES .....	32
TOWING OR COASTING .....	33



# FOREWORD

---

The purpose of this publication is to provide basic technical information for servicing and repairing heavy duty truck transmissions. A guide to help the mechanic locate the trouble, analyze the cause, and make the necessary repairs. Emphasis is placed on servicing Fuller twin countershaft transmissions; however, some sections are common to all mechanical transmissions. If more in-depth diagnosis is required, reference can be made to the following publications:

- Air System Troubleshooting Guide
- Understanding Spur Gear Life
- Service Manuals
- Rear Seal Maintenance Guide

These programs and other forms of product service information for Fuller transmissions and components are available on request. A Technical Literature Order Form may be found in the back of this manual. You may also obtain Service Bulletins detailing information on product improvements, repair procedures, and other service related subjects by writing to the following address:


EATON CORPORATION  
TRANSMISSION DIVISION  
Technical Service Department  
PO. Box 4013  
Kalamazoo, MI 49003

Every effort has been made to ensure the accuracy of all information in this brochure. **However, Eaton Transmission Division makes no expressed or implied warranty or representation based on the enclosed information.** Any errors or omissions may be reported to Training and Publications, Eaton Transmission Division, PO. Box 4013, Kalamazoo, MI 49003.

# TRANSMISSION FUNCTION

The transmission must efficiently transfer the engine's power, in terms of torque, to the vehicle's rear wheels. Torque is the twisting or circular force delivered by the engine's flywheel. The transmission's gear ratios increase or decrease torque depending on the requirements needed to move or start the load. Gearing also increases or decreases speed. The gear ratios are correctly spaced so that the engine will operate in its most efficient RPM range with progressive speed changes.

To meet the vehicle's requirements, the transmission must have ratios low enough to start the vehicle moving, to maintain movement up grades, and to keep engine operating in its peak efficiency range. The transmission, too, must provide an easy method for gear selection.

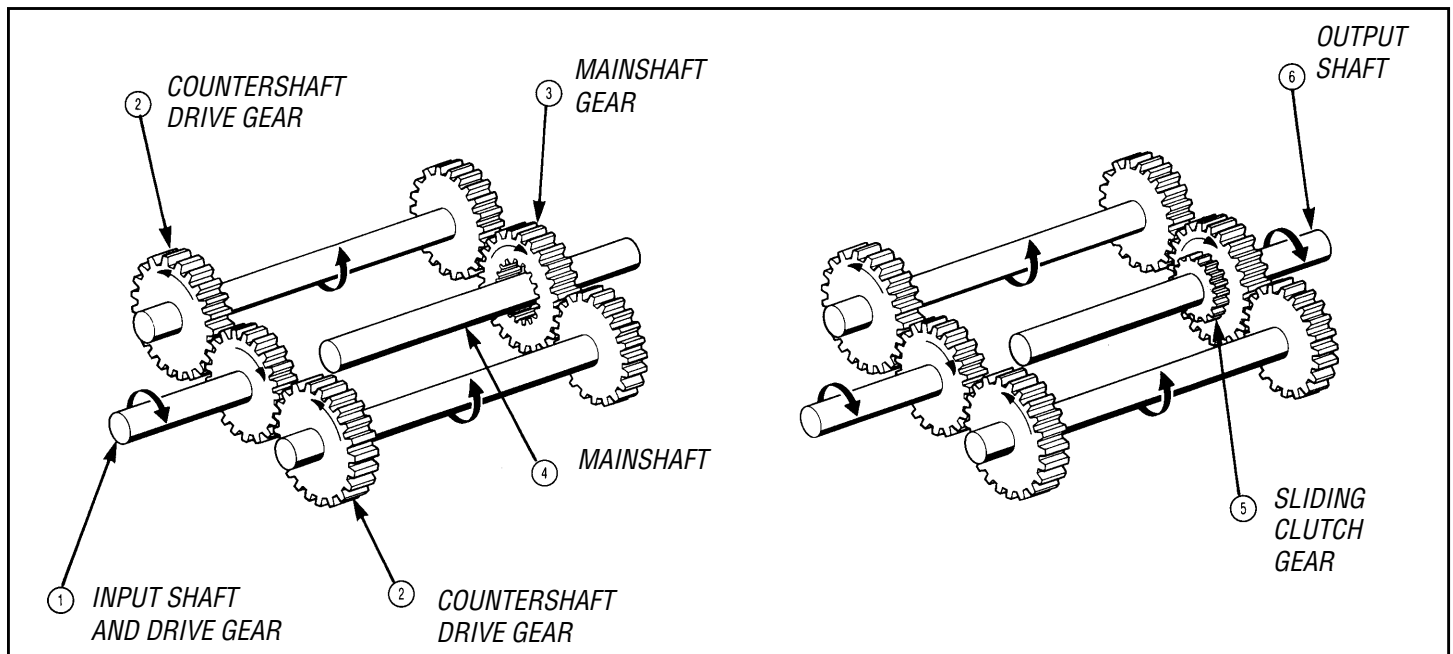

A simplified diagram of the power flow through a Fuller twin countershaft transmission will help show how torque and speed are changed, and how torque is divided between the two countershafts.


The input shaft and drive gear (1) are in constant mesh with both countershaft drive gears (2); when the input shaft turns, the countershaft gears are in constant mesh with the “floating” mainshaft gears (3). The mainshaft gears are simply free-wheeling on the mainshaft (4). A

sliding clutch gear (5), which is splined to the mainshaft, is engaged into the internal clutching teeth of the mainshaft gear, coupling it to the mainshaft. The mainshaft will now be turning at the selected gear ratio.

Fuller twin countershaft Roadranger® transmissions commonly consist of a five speed front section and either a two or three speed auxiliary section, both in one case.



# POWER FLOW (con't.)

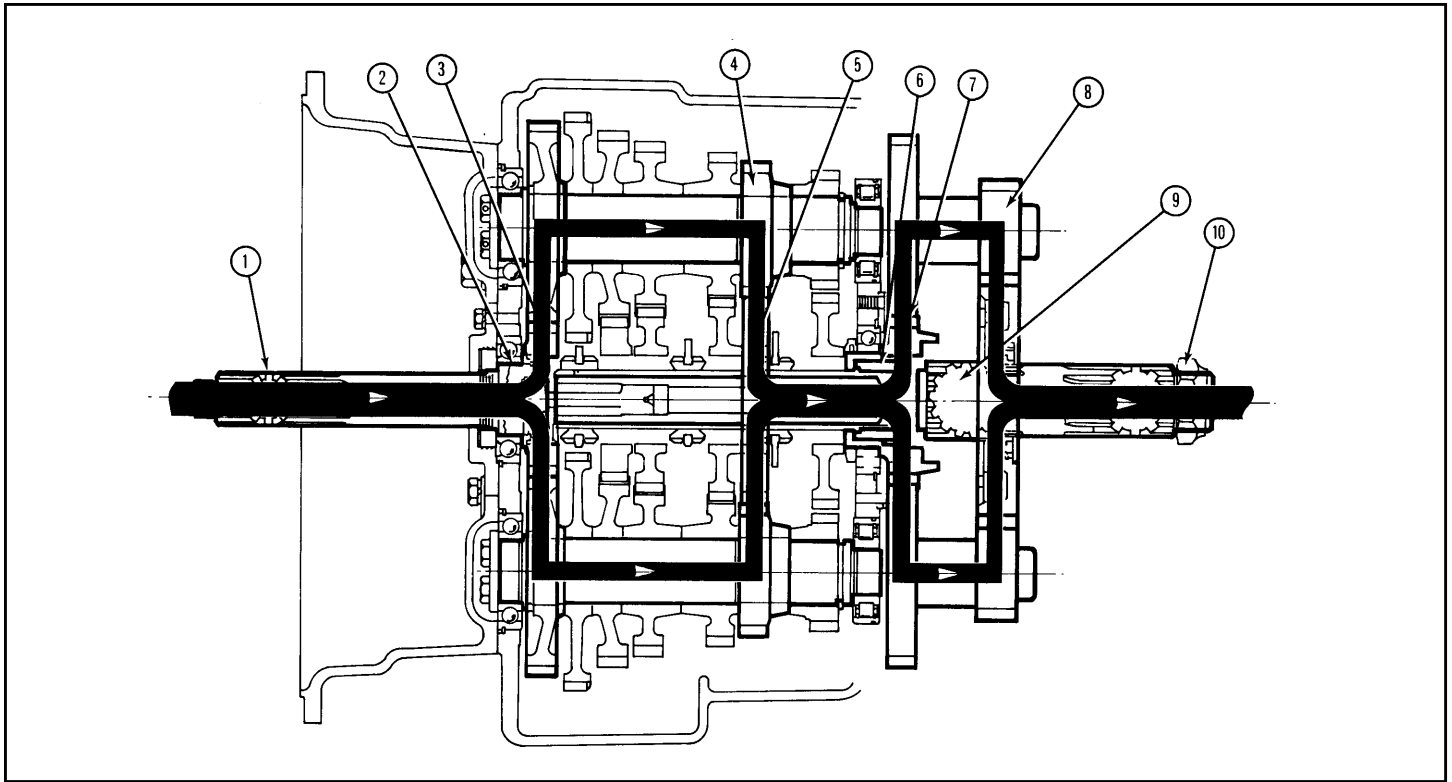



1. Power (torque) from the engine flywheel is transferred to the input shaft.
2. Splines on input shaft engage internal splines in hub of drive gear.
3. Torque is split between the two countershaft drive gears.
4. Torque delivered by two countershaft gears to mainshaft gear which is engaged. Diagram shows first speed gear engaged.
5. Internal splines in hub of mainshaft gear transfers torque to mainshaft through sliding clutch gear.
6. Mainshaft transfers torque to auxiliary drive gear through a self-aligning coupling gear located in hub of auxiliary drive gear.
7. Torque is split between the two auxiliary countershaft drive gears. (In direct drive or high range, power is delivered to the output shaft from the auxiliary drive gear through a self-aligning sliding clutch gear.)
8. Torque is delivered by the two countershaft low range gears to the low range gear.
9. Torque delivered to output shaft through self-aligning sliding clutch gear.
10. Output shaft is attached to drive line.

# TIMING

All Fuller twin countershaft transmissions are “timed” at assembly. It is important that proper timing procedures are followed when reassembling the transmission. Timing assures that the countershaft gears will contact the mating mainshaft gears at the same time, allowing mainshaft gears to center on the mainshaft and equally divide the load.


One set of gears must be timed in the front section, and one set the auxiliary section. Timing consists of marking the proper teeth before installation and meshing the marked teeth during assembly. The following is step by step procedure for timing:

## Front Section

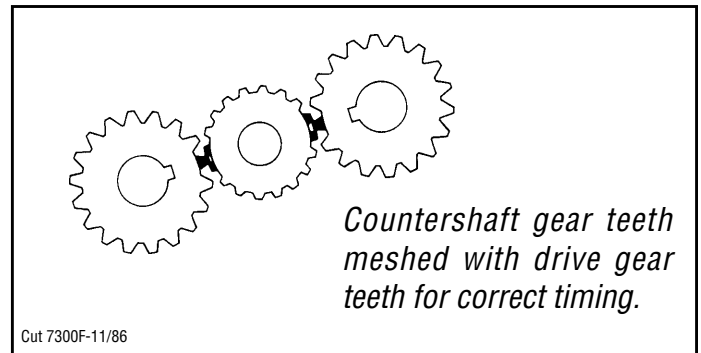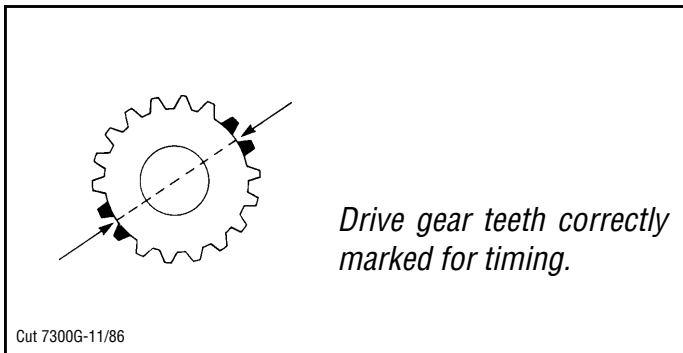

1. Main Drive Gear - Mark any two adjacent teeth on the drive gear, then mark the two adjacent teeth which are directly opposite the first set marked. There must be an equal number of teeth between the markings on each side of the gear.

3. Meshing Countershaft Gears and Main Drive Gear - Install the drive gear assembly. Mesh the marked left countershaft gear tooth between the two marked teeth on the drive gear. Repeat the procedure with right countershaft.

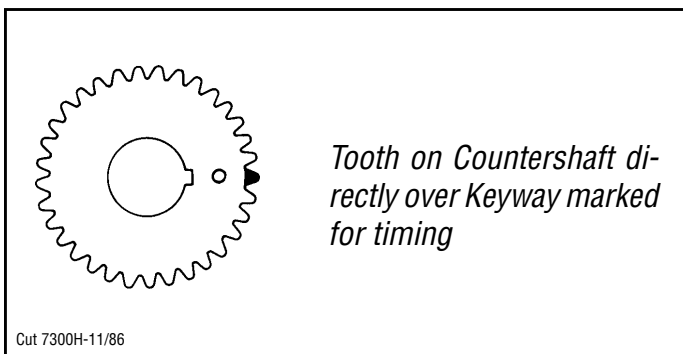

2. Countershaft Drive Gears - Mark on each drive gear the gear tooth which is directly over the key-way. This tooth is stamped with an “O” for identification.

## Auxiliary Section

The gear set which is marked for timing in the auxiliary section varies, depending on the model. Usually the gear at the rear of the auxiliary is used.

1. Mainshaft Gear - Mark any two adjacent teeth on the mainshaft gear, then mark the two adjacent teeth directly opposite.
2. Countershaft Gears - On each countershaft assembly mark the gear tooth which is stamped with “O”.

**Note:** Refer to the appropriate service manual for more detailed timing instructions for the Fuller twin countershaft transmission being assembled.

# COMMON TRANSMISSION COMPLAINTS


---

## Vibration

Although the effects of vibration will show up in the transmission, vibration usually originates somewhere else in the drive train. Vibration can usually be felt or heard by the driver; however, in some cases, transmission damage caused by vibration will occur without the driver's knowledge. (Refer to the "Torsional Vibration" section for the causes and cures of vibration problems.)

**Some of the problems found in the transmission due to drive train vibration are:**

1. Gear rattle at idle. (See "Shafts" section.)

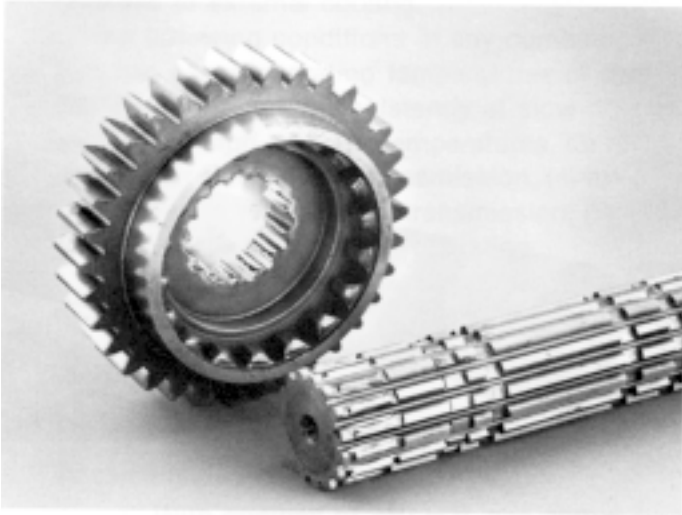

*Fretted splines*

2. Gear and shaft splines "fretted".
3. Noise. (See "Noise", this section.)
4. Fretted bearings. (See "Bearing" section.)
5. Repeated rear seal leakage.



*Broken synchronizer pins*

6. Broken or loose synchronizer pins.
7. Continuous loosening of capscrews, brackets and mountings.



*Input spline wear*

8. Worn shaft spline wear.
9. Worn universal joints. (Not a transmission symptom, but an indicator of vibration.)

# COMMON TRANSMISSION COMPLAINTS (con't)

## Common causes of vibration:

1. Driveline imbalance or misalignment. (See "Transmission Alignment" section.)
2. Unbalanced wheels or brake drums.
3. Rough running engine.
4. Broken or worn engine mounts.
5. Worn Suspension.

## Gear Slipout and Jumpout

### Front Section


When a sliding clutch is moved to engage with a mainshaft gear, the mating teeth must be parallel. Tapered or worn clutching teeth will try to "walk" apart as the gears rotate. Under the right conditions, slipout will result. Some of these conditions are:

1. Transmission mounted eccentrically with engine flywheel pilot.
2. Excessive gear clashing which shortens clutching teeth.




*Snubbed clutching teeth*

3. Gear clutching teeth wearing to a taper.

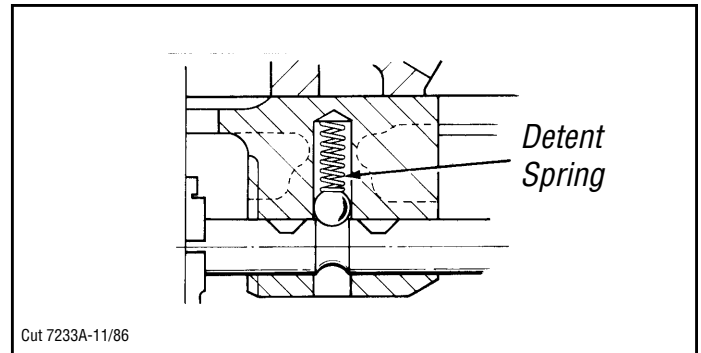

4. Insufficient pressure on detent ball from weak or broken detent spring.

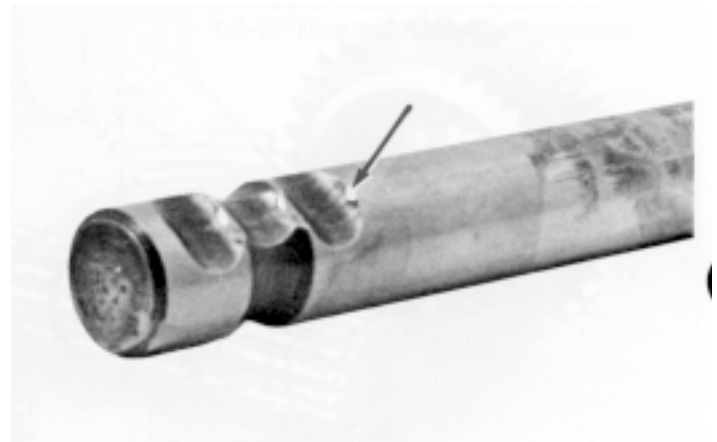

*Worn yoke bar*


5. Excessive wear on detent notch of yoke bar.
6. Incorrect adjustment of remote shift control linkage resulting in partial engagement. Also check for loose connections and worn bushings.

Slipout will generally occur when pulling with full power or decelerating with the load pushing.

Jumpout will occur when a force sufficient to overcome the detent spring pressure is applied to the yoke bar, moving the clutch gear to a neutral position.

# COMMON TRANSMISSION COMPLAINTS (con't.)


## Conditions which may produce jumpout are:

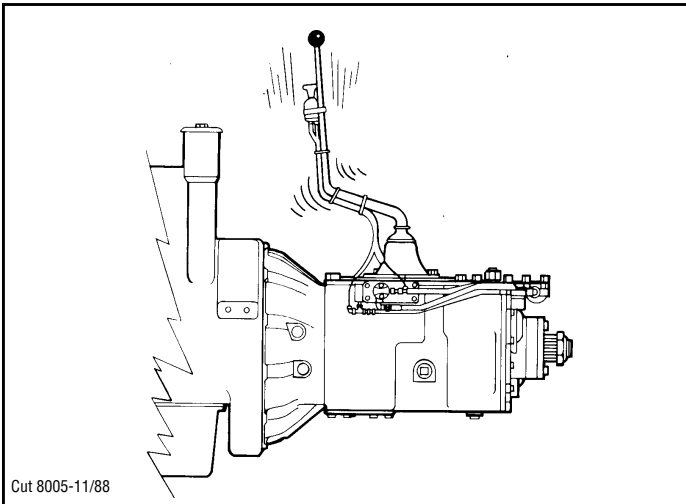

1. Extra heavy and long shift levers which swing, pendulum fashion, from operating over uneven terrain. Whipping action of the lever overcomes detent spring tension.
2. Mechanical remote controls with the master mounted to the frame. Relative movement between engine-transmission package and frame can force transmission out of gear. Worn or broken engine mounts increase the effects of this condition.

## Auxiliary section

Slipout in the auxiliary section may be caused by the clutching teeth being worn, tapered, or not fully engaged. These conditions cause the clutch gear to “walk” out of engagement as the gears turn. Causes of these types of clutching defects are: clashing or normal wear after long life. Vibrations set up by an improperly aligned drive line and low air pressure add to the slipout problem.

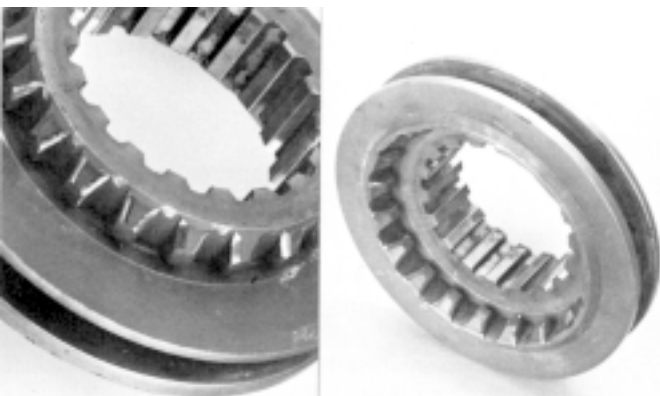

*Tapered clutching teeth*


Jumpout in the auxiliary section usually occurs with the splitter gear set. If torque is not sufficiently broken during splitter shifts, the sliding clutch gear may not have enough time to complete the shift before torque is re-applied to the gears. As torque is reapplied, the partially engaged clutch gear “jumps” out of the splitter gear. Since the gears have torque applied to them, damage will be done to the clutching teeth of the mating gears.

## Hard Shifting

The effort required to move a gear shift lever from one gear position to another varies. If too great an effort is required it will be a constant cause of complaint from the driver.

Most complaints are with remote type linkages used in cab-over-engine vehicles. Before checking the transmission for hard shifting the remote linkage should be inspected. Linkage problems stem from worn connections or bushings, binding, improper adjustment, lack of lubrication on the joints or an obstruction which restricts free movement.

To determine if the transmission itself is the cause of hard shifting, remove the shift lever or linkage from the top of the transmission. Then, move the shift blocks into each gear position using a prybar or screwdriver. If the yoke bars slide easily, the trouble is with the linkage assembly. If the trouble is in the transmission, it will generally be caused by one of the following:

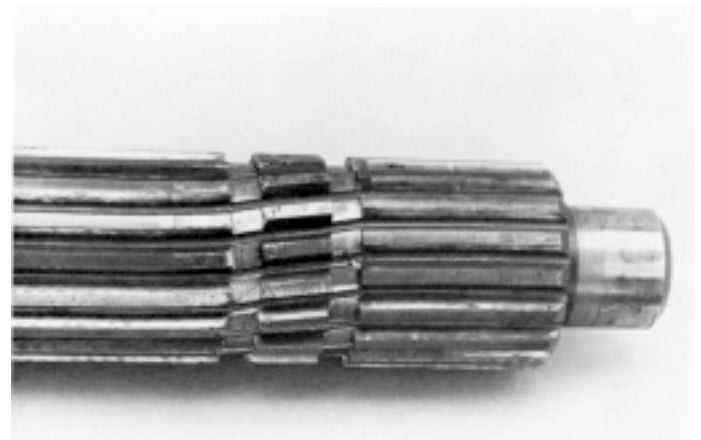

1. **Splines of sliding clutch gear binding on mainshaft** as a result of a twisted mainshaft key, bent shift yoke or bowed mainshaft key.

# COMMON TRANSMISSION COMPLAINTS (con't.)

---

## Hard Shifting (con't)

2. Yoke bars binding in the bar housing as a result of cracked housing, overtorqued shift block lock-screw, sprung yoke bar, or swelled areas of the yoke bar.

If hard shifting occurs only in first and reverse, the shift block detent plunger movement may be restricted. This can result from burrs on the plunger, or from overtightening the plunger spring plug. With the plunger blocked in the depressed position, the plug should be tightened until it bottoms out against the spring, then backed out 1/4 to 1/2 turn.

Gear clashing should not be confused with hard shifting. Gear clashing occurs when an attempt is made to engage the clutch gear before it has reached synchronization with the mainshaft gear. (See "Clashing", this section.)

## Heat

The transmission operating temperature should never exceed 250°F. (120°C.) for an extended period of time. If it does, the oil will breakdown and shorten transmission life.

Because of the friction of moving parts, transmissions will produce a certain amount of heat. In most cases normal operating temperature is approximately 100°F. (40°C.) above ambient. Heat is dissipated through the transmission case. When conditions prevent the proper dissipation of heat, then overheating occurs.

Before checking for possible causes of overheating the oil temperature gauge and sending unit should be inspected to make sure they are giving correct readings.

**Following are some of the causes of overheating. (See also "Lubrication")**

1. Improper lubrication. Oil level too low or too high, wrong type of oil, or an operating angle of more than 12 degrees.
2. Operating consistently under 20 MPH:
3. High engine RPM.
4. Restricted air flow around transmission, due to transmission being "boxed in" by frame rails, deck lids, fuel tanks and mounting brackets, or by a large bumper assembly.
5. Exhaust system too close to transmission.
6. High ambient temperature.
7. High horsepower, overdrive operation.
8. Coasting downhill with the clutch depressed.

In some cases an external oil cooler kit can be used to correct overheating problems.

**Transmission Oil Coolers are:**

### Recommended

-With engines of 350 H.P. and above with overdrive transmissions

### Required

-With engines 399 H.R and above with overdrive transmissions and GCW's over 90,000 lbs.

-With engines 399 HR and above and 1400 Lbs.-Ft. or greater torque

8 -With engines 450 H.R. and above

# COMMON TRANSMISSION COMPLAINTS (con't.)

## Noise


There will always be a certain level of noise due to normal transmission operation. However, excessive noise, or unusual noise such as whine, growl, or squeal indicates some kind of a problem.

The transmission itself can be the cause of excessive or unusual noise. Also noise can originate elsewhere in the vehicle, but be picked up and amplified by the transmission.



## Transmission Noise

### 1. Knocking or thudding.

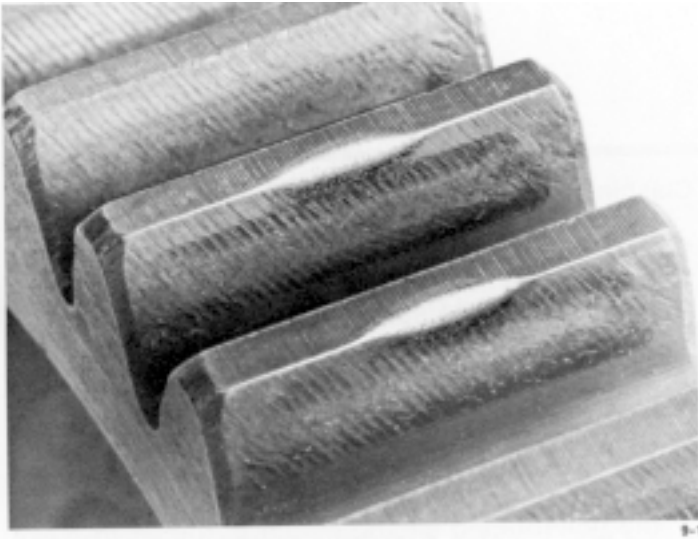

- a. Gears - Bumps or swells on gear teeth. Such bumps or swells can be removed with a hone or small hand grinder; these areas can be identified as highly polished spots on the face of the gear tooth. Generally, this noise is more prominent when the gear is loaded; thus, the problem gear can be located as the noise occurs in a specific gear position. Bumps or swells are caused by improper handling of gears before or during assembly.
- b. Bearings - Noise comes in at low shaft speeds in any position. It is caused by bearings with damaged balls or rollers, or with pitted and spalled raceways. (See "Bearings" section.)

- c. Cracked Gear - A gear cracked or broken by shock loading or by pressing on shaft during installation will produce this sound at low speeds. At high speeds a howl will be present.

### 2. High Pitched Whine or Squeal.

- a. Gear Wear - Result of normal gear wear, including gear tooth pitting from excessive use. In advanced deterioration, a howl will result.
- b. Mismatched Gear Sets - Such gear sets are identified by an uneven wear pattern on the face of gear teeth.
- c. Bearings - "Pinched" bearings, having insufficient axial or radial clearance. (See "Bearing" section.)

### 3. Growling

- a. Timing Error - Improper timing of the transmission during reassembly, or improper timing due to gear turning on the countershaft. Both conditions produce error in tooth spacing.



# COMMON TRANSMISSION COMPLAINTS (con't.)

---

## Noise (CON'T)


### Causes of Transmission Noise Originating Elsewhere in Vehicle (see also "Alignment" section)

1. Rough idling engine. (See "Gears and Shafts" gear rattle.)
2. Engine operating noise.
3. Clutch driven plates in which the dampening action of springs or rubber blocks has been eliminated by wear set or fracture.
4. Drive line out of balance.
5. Unequal joint working angles.
6. Worn crosses in universal joints.
7. Loose or worn center bearings.
8. Worn or pitted teeth on ring gear and pinion of driving axle. Rear axle bearing failure.
9. Wheels out of balance.
10. Worn spring pivot bearing.
11. Loose "U" bolts.
12. Brake drums warped or out of balance.

## GEARS AND SHAFTS

---

### Clashing

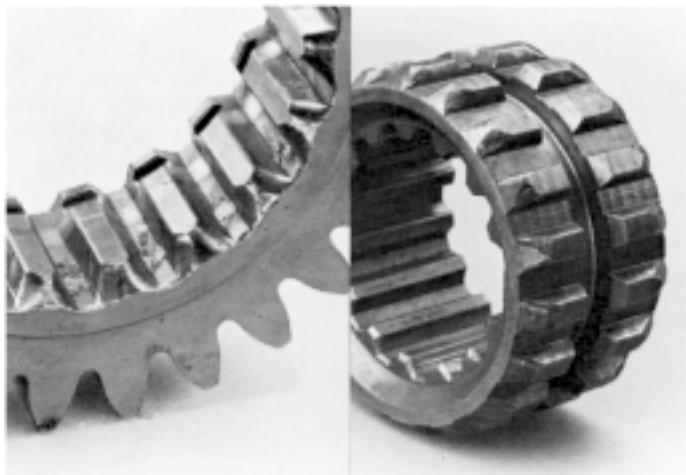

*Snubbed clutching teeth*

Snubbing and clashing gears while shifting are frequent abuses to which unsynchronized transmissions are subjected. Light snubbing will do little damage. The real damage is done by the hard clash shift caused by engaging gears which are far out of synchronization. This can break pieces of metal from the ends of the clutching teeth.

**Clashing gears can be traced to one of three causes:**

1. **Improper shifting** - This applies to drivers who are not familiar with the shift pattern or have not learned the RPM spread between shifts.
2. **Clutch** - Clashing when starting up in first or reverse gear can be caused by insufficient clutch clearance or a dragging clutch not releasing properly. This makes the transmission countershafts and mainshaft gears continue rotating while the clutch pedal is depressed. Clashing results when the non-rotating sliding clutch is forced to mesh with a rotating mainshaft gear. Double clutching during lever shifts will also reduce snubbing and clashing.
3. **Inertial Force** - Countershafts and mainshaft gears usually take from 3 to 5 seconds to stop rotating after the clutch has been disengaged. Attempting to mesh a clutch gear with a mainshaft gear before the mainshaft gear stops will result in clashing. If the transmission is not equipped with a clutch brake or countershaft brake, it is necessary to pause a few seconds after depressing the clutch pedal before attempting initial engagement of the transmission.

### Gear Failures

All gear teeth wear because of the sliding action which takes place as mating teeth mesh. Normal wear is a constant and slow wearing of the tooth surface. Transmission gear tooth life can be shortened by various adverse conditions. These conditions and the failures resulting from them are discussed in the Fuller booklet entitled "Understanding Spur Gear Life" (form no. 186).




# GEARS AND SHAFTS (con't.)


---

## Manufacturing Marks


Sometimes gears are replaced or thought to be defective because of marks left on the gear by manufacturing processes. These blemishes, however, do not contribute to gear failure and the gear should not be replaced because of these marks.

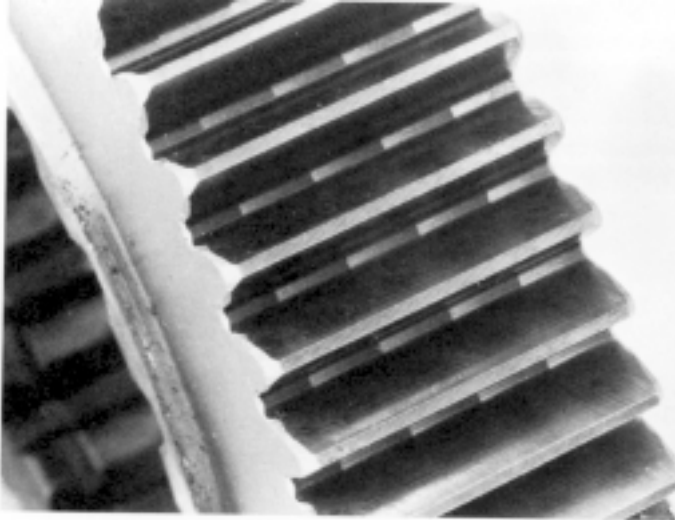

1. **Hob Marks** — These are cutting marks or lines formed during the initial cutting of the gear teeth. Hob marks on the tooth face will be removed by the shaving process, but hob marks in the root of the tooth will most likely remain, and may be found even on gears with much wear on them.

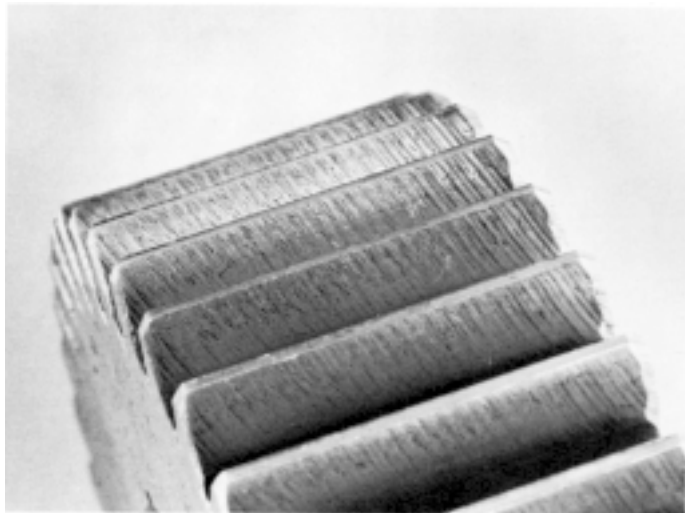

2. **Shaving marks** — The shaving operation leaves distinct diagonal marks on the face of the gear tooth. These marks can be distinguished from scoring marks by the fact they are diagonal, while scoring marks are more nearly vertical. Most shaving marks are removed during normal gear operation.

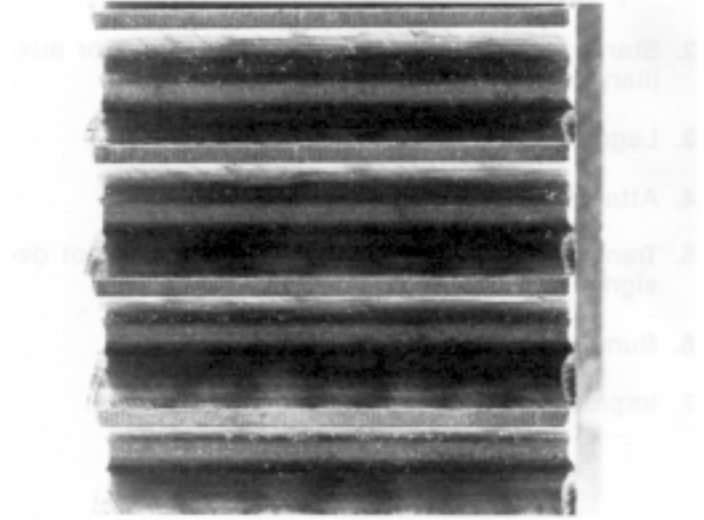

3. **Lipping** — Lipping or shaving burrs, is the formation of "lips" at the tip of the gear teeth machining. These "lips" will do no harm to the gear.

## Gear Rattle at Idle

Mainshaft gears are designed to have a specified amount of axial clearance which allows them to rotate freely on the mainshaft. The amount of clearance is governed by the use of washers. A rough idling engine can set up vibrations, causing the mainshaft gears to rattle as they strike mating gears. This condition can usually be cured by improving the idling characteristics of the engine. Tolerance washers may have to be changed to bring the axial gear clearance to within tolerance on high mileage units.

See the service manual for procedure and specifications.

# GEARS AND SHAFTS (con't.)


---

## Shaft Twist and Fracture

Failure of transmission shafts through fracturing or twisting is caused when stresses are imposed on them which are greater than they were designed to withstand.


The main causes for these failures are:

1. Improper clutching techniques.
2. Starting in too high of gear (either front or auxiliary section).
3. Lugging.
4. Attempting to start with brakes locked.
5. Transmission used for application it was not designed to withstand.
6. Bumping into dock when backing.
7. Improper mounting of adjustable 5th wheel.

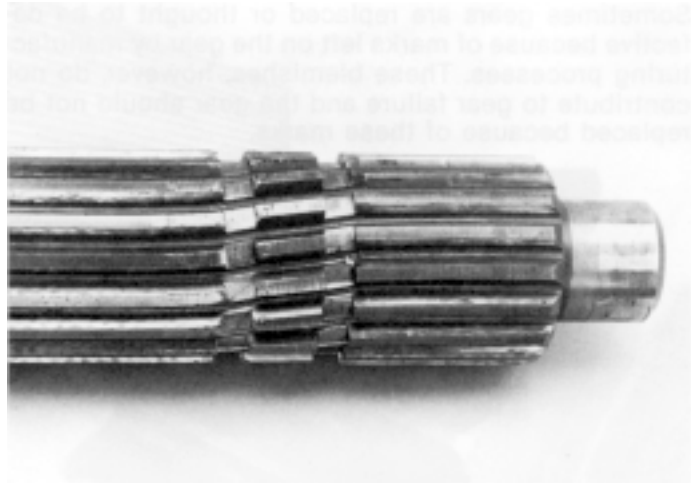

*Twisted mainshaft*

Loads not severe enough to cause shaft fractures may cause the shaft to twist.

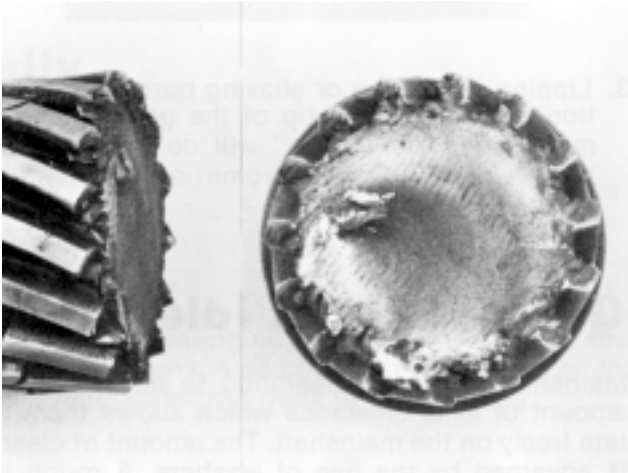

*Fractured mainshaft*

As with gear teeth, shafts may fracture as a result of fatigue or impact.

# BEARINGS

## Fatigue



*Bearing race "flaking"*

13-1

Bearing fatigue is characterized by flaking or spalling of the bearing race. Spalling is the granular weakening of the bearing steel which causes it to flake away from the race. Because of their rough surfaces, spalled bearings will run noisy and produce vibration.

Normal fatigue failure occurs when a bearing "lives out" its life expectancy under normal loads and operating conditions. This type of failure is expected and is a result of metal breakdown due to the continual application of speed and load.



13-2

*Ball path pattern caused by out-of-round squeeze*

Premature fatigue failure may occur in transmissions when the bearing bore is undersized or out of round due to poor quality resleeving. Extreme care should be taken when reboring the housing. Boring the housing off center will result in misalignment of the shafts. Always use precision equipment such as a jig boring machine. Never prick punch the bearing bores to tighten the fit.

## Lubrication



*Burnt and spalled bearing*


13-3

Bearing failure due to poor lubrication is characterized by discoloration of the bearing parts, spalling of the race, and possible breakage of the retainer. Failure may result not only from a low oil level, but also from contaminated oil, improper grade oil, or mixing of oil types (including the use of additives).

To prevent this type of failure, the transmission should always be filled to the proper level, using a recommended type and grade of oil, and changed at regular intervals. (See "Lubrication" section.)

# BEARINGS (con't.)


## Brinelling

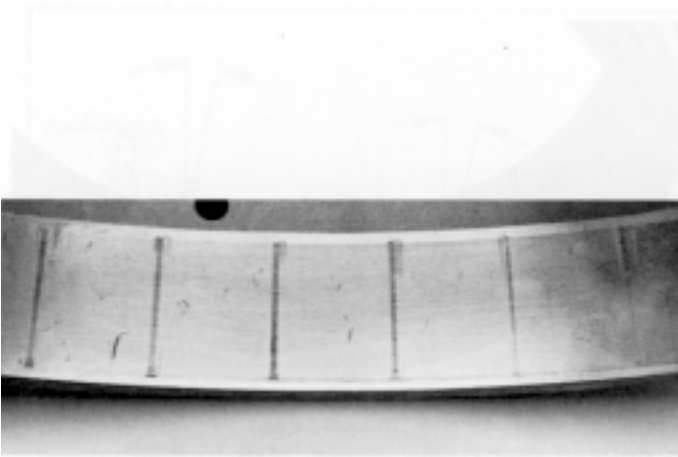

*Brinelled race*

Brinelling can be identified as tiny indentations high on the shoulder or in the valley of the bearing raceway. They can be caused by improper bearing installation or removal. Driving or pressing on one race, while supporting the other is the primary cause. To prevent brinelling always support the race which has pressure applied to it. In addition to brinelling, damage can also occur to the bearing shields, retainers and snap rings by using a hammer and chisel to drive bearings. This damage can be avoided by using correct drivers or pullers.

## Fretting

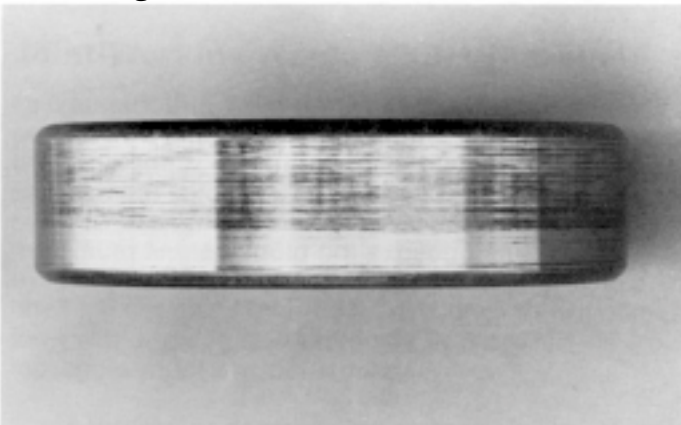


*Fretted outer race*

The bearing outer race can pick up the machining pattern of the bearing bore as a result of vibration. This action is called fretting.

Many times a fretted bearing is mistakenly diagnosed as one which has spun in the bore. Only under extreme conditions will a bearing outer race spin in the bore.

## Contamination

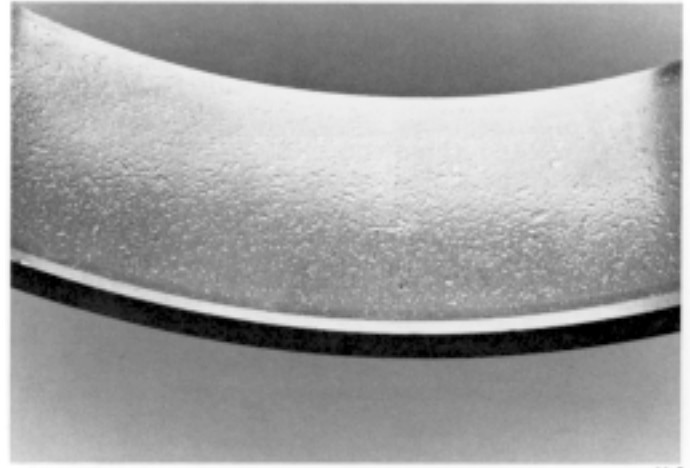

*Contaminated race*


When bearings fail as a result of contamination, it is due to either contaminants entering the transmission case or the bearings have been improperly handled during service or storage. Bearings affected from contamination are identified by scoring, scratching or pitting of the raceways and balls or rollers, or a build up of rust or corrosion on the bearing parts. In addition, the presence of very fine particles in the oil, such as abrasive dust, or the use of overly active EP (extreme pressure) oils, will act as a lapping compound and produce a very highly polished surface on the raceways and balls or rollers. This lapping process will significantly shorten the life of the bearing.

Impurities will always enter the transmission during its normal breathing process. This will not seriously affect the bearings if the transmission oil is changed as recommended.

New bearings should be stored in their wrappers until ready for use. Used bearings should be thoroughly cleaned in solvent, light oil or kerosene, covered with a coat of oil and wrapped until ready for use. Always use a new wrapping after reoiling.

# BEARINGS (con't.)

## Misalignment

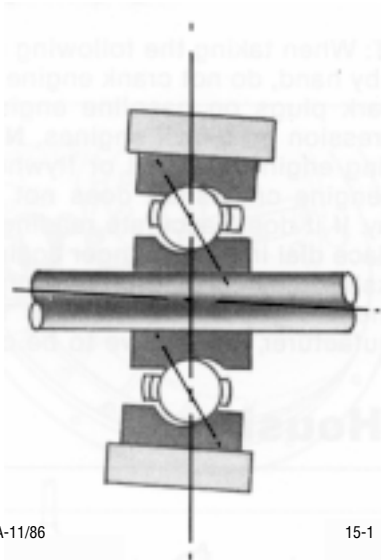


*Bearing misalignment*

Misalignment can occur in the input shaft drive gear bearing if the transmission is mounted eccentrically with the pilot bearing bore in the flywheel. An indication of this condition would be damage to the ball separators and shield.

The clutch housing, clutch housing mounting face, and pilot bearing should be checked for eccentricity, foreign matter and proper mounting position when trying to locate the cause of the misalignment. (See "Alignment" section.)

## Electric Arcing

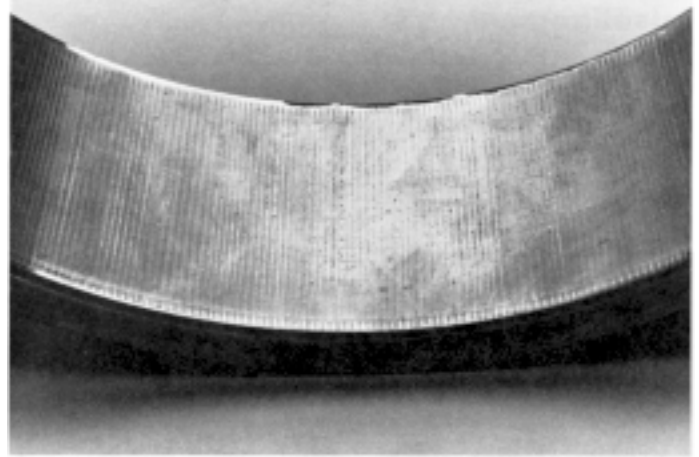

*Electric arcing*

When an electric current passing through a bearing is broken at the contact surfaces of the ball or roller and races, arcing results, which will pit the bearing components. In extreme cases, the balls or rollers may actually be welded to the bearing races, preventing the bearing from rotating.


This condition may occur in truck transmissions as a result of electric welding on the truck with an improper ground. When doing either A.C. or D.C. welding, never place the ground so as to allow current to pass through the transmission.

# TRANSMISSION ALIGNMENT

## Concentric Alignment of Transmission to Engine

### Common concerns resulting from misalignment


- Direct gear slipout
- Drive gear bearing failure
- Premature input shaft spline wear from rear hub of two plate clutches.

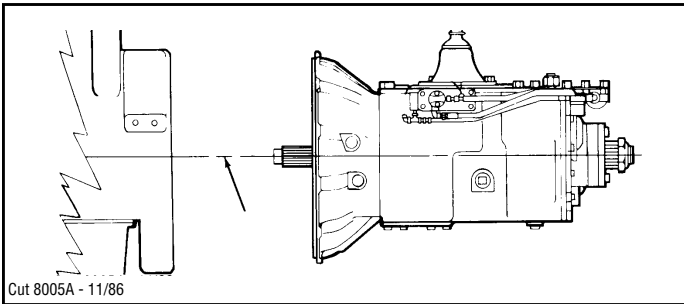


Concentric alignment means that the engine and transmission must have a common axis. The purpose of this section is to set forth the procedures to use in checking for possible misalignment.

**IMPORTANT.** When taking the following readings, rotate engine by hand, do not crank engine with starter. Remove spark plugs on gasoline engines, and release compression on diesel engines. **NOTE:** Before dial indicating engine flywheel or flywheel housing, make sure engine crankshaft does not have excessive end-play. If it does, accurate readings cannot be obtained. Place dial indicator finger against flywheel. Force crankshaft back and forth with pry bar. If end-play movement exceeds maximum as specified by engine manufacturer, it will have to be corrected.

### Worn Housings

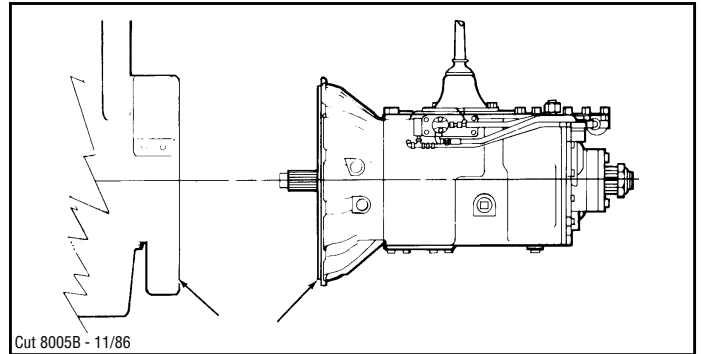

Inspect for worn or fretted pilot on both the transmission clutch housing and the engine flywheel housing. The 1/4" pilot lip of transmission clutch housing can wear into the flywheel housing either by transmission loosening up or after high mileage just from road and engine vibration. Any appreciable amount of wear on either part will cause misalignment and the part should be replaced.

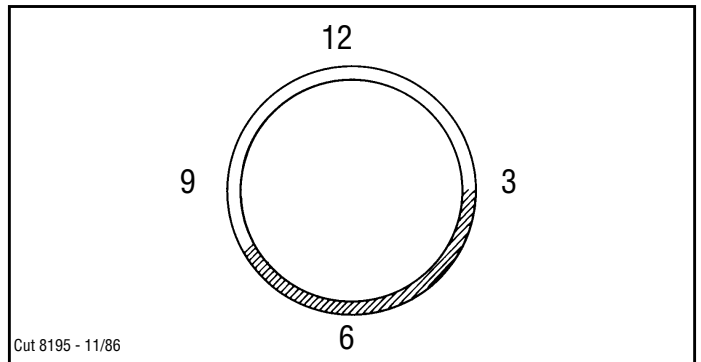


The basic instrument needed for taking readings is a taper pointed dial indicator. Accuracy of readings is essential for correcting alignment problems. Clean all surfaces thoroughly before proceeding.

The wear will generally be found from the 3:00 o'clock to 8:00 o'clock position.




# TRANSMISSION ALIGNMENT (con't.)

## Engine Flywheel Housing Pilot

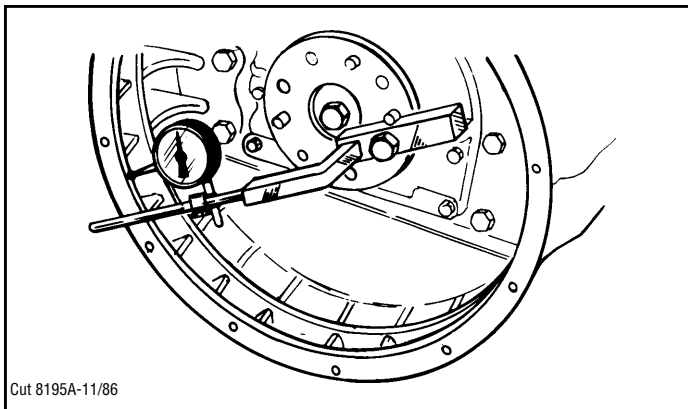


Dial indicate the pilot or bore of engine flywheel housing. Secure dial indicator to engine flywheel with tapered point against housing pilot. Rotate flywheel by hand. With chalk or soap stone, mark high and low points of indicator as it is being rotated.

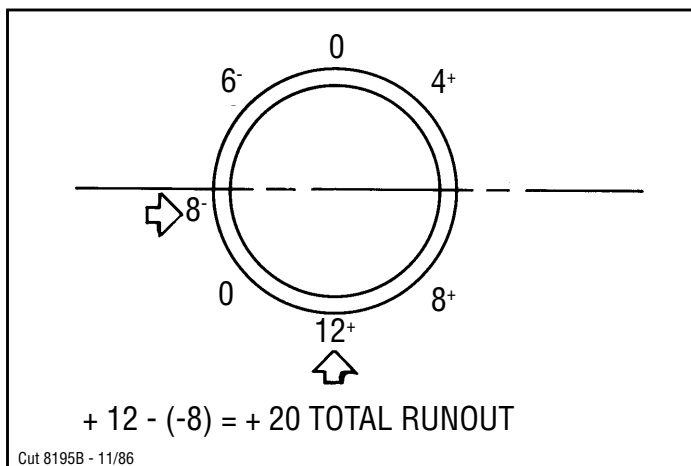

The total runout will be the difference between the highest plus and minus readings. SAE maximum total runout for flywheel housing pilot is .008" with No.1 and No.2 SAE housings.


## Engine Flywheel Housing Face

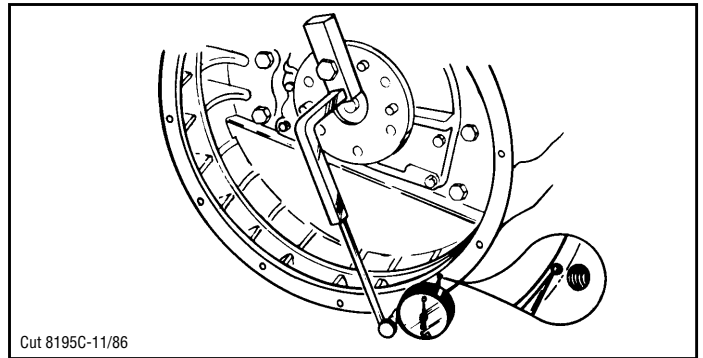

Dial indicate the face of engine flywheel housing. With dial indicator secured to flywheel, move tapered point to contact face of flywheel housing.

Mark high and low points in the same manner as in previous step. SAE maximum total runout for the flywheel housing face is .008" with SAE No.1 and No. 2 housings. **NOTE:** Mark the high and low runout readings in clock positions if it is necessary to reposition the flywheel housing.


## Flywheel Face

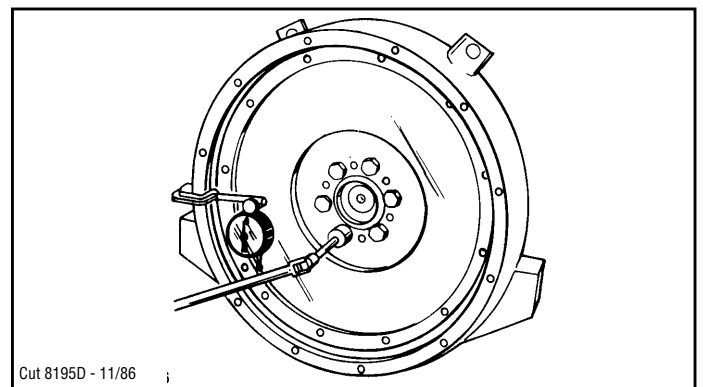

Dial indicate the flywheel face. Secure dial indicator to engine flywheel housing near the outer edge. Turn flywheel to obtain readings. Maximum allowed is .001" runout or face wobble per inch of flywheel radius. For example, if vehicle has a 14" clutch and readings are taken just off the outer edge of the clutch disc. wear, maximum tolerance would be .007".

# TRANSMISSION ALIGNMENT (con't.)

## Flywheel Pilot Bore

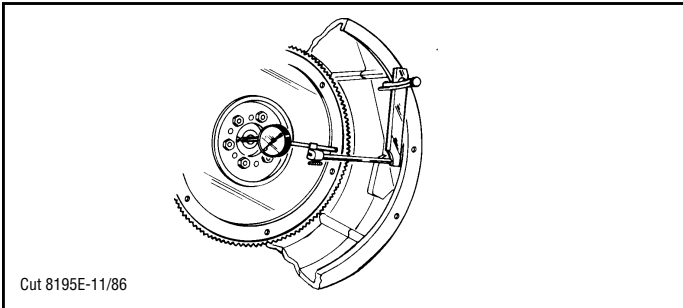

Dial indicate pilot bearing bore of flywheel. With indicator secured to flywheel housing, move gauge finger to contact pilot bearing bore surface. Turn flywheel and obtain readings. SAE maximum total run-out for the pilot bearing is .005".

## Transmission Clutch Housing

The transmission clutch housing face and pilot can not be checked accurately in the field without special measuring tools. Recommended maximum runout for the transmission clutch housing face and pilot is .003" with SAE No.1 and No.2 housings.

# DRIVELINE ANGULARITY

## Torsional Vibration

### Checking Driveline U-Joint Operation Angles

The action of a drive line with a universal joint at either end working through an angle results in a peculiar motion. The drive line will speed up and slow down twice for each revolution. If the working angles at either end of the shaft are unequal, torsional vibration results. This torsional vibration will tend to cancel itself out if both joint working angles are equal.

### Types of Noise


Noise or vibration which occurs only at certain road speeds and diminishes as speed increases is generally caused by unequal working angles of drive line joints.

Noise or vibration which is persistent throughout the speed range and varies in intensity with change of speed may be caused by unbalanced drive lines, unbalanced brake drums or discs, or drive lines with universal joints out of phase.

### Preliminary Checks

Make checks of the following before taking angle readings:

1. Check companion flange or yoke nut for looseness and torque to proper specification if necessary.

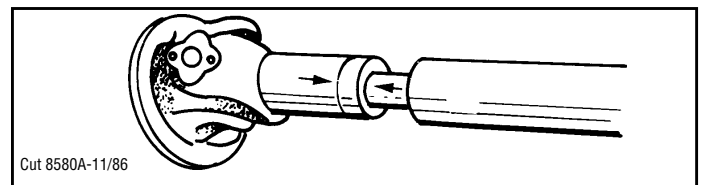

2. Drive line slip joints that do not have the arrows or other markings pointing to each other will result in the drive line universal joints being out of phase. In other words, the transmission universal joint may be turned one spline or more to the right or left of being aligned with the universal joint at opposite end of the drive line. NOTE: Some computer designed drive lines are purposely built with U-joints out of phase. Check manufacturers specifications for proper setting. Also, check closely to make certain no twist has occurred to the tubing, causing these two joints to be out of phase.


Make sure the slip joint works freely and is not bound or seized. Slip joints must absorb axle housing movements.

3. Unbalanced drive lines can cause vibration that occurs throughout the speed range of vehicle and varies in intensity with change of speed. The drive line may be at fault in respect to balance and concentricity. A quick field check to determine drive line balance can be made by securing a small piece of metal or similar weight with a hose



# DRIVELINE ANGULARITY (con't.)

## Preliminary Checks (con't)

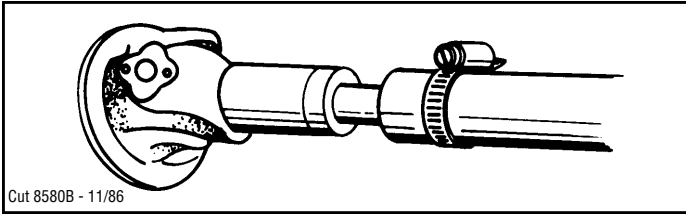


clamp to the front of the tube where the splined shaft is welded. Road test the vehicle and continue to move the weight around tube until balance point is found and vibration disappears, or is minimized.

Drive lines are dynamically balanced to their intended rotational velocity and not to infinite speeds. Thus, vibration can be expected when this rotational velocity is exceeded.

Check concentricity of drive line by mounting on lathe centers and dial indicating. Check manufacturer's specifications for runout allowance.



4. Engine supports that are worn, broken or loose, and mounting pads that are worn or deteriorated must be corrected to restore the engine suspension to its original vibration tolerance.

## Taking Readings

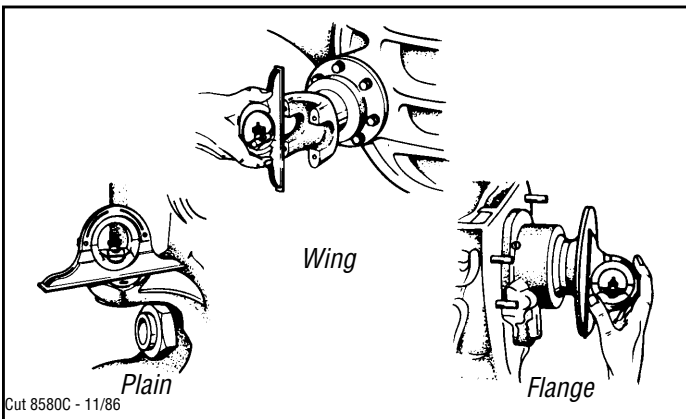

Take readings with protractor from machined surfaces of yokes or companion flanges. Plain, wing or flange type joints may be encountered. Some will require partial disassembly to obtain accurate readings.

On plain type joints, it may be necessary to remove the bearing cap. When taking readings, make sure the universal joint is in a vertical plane.

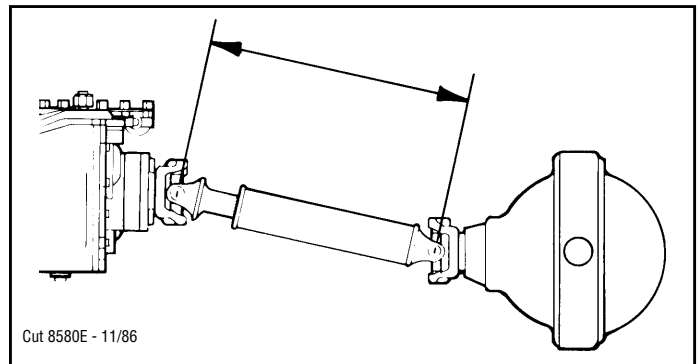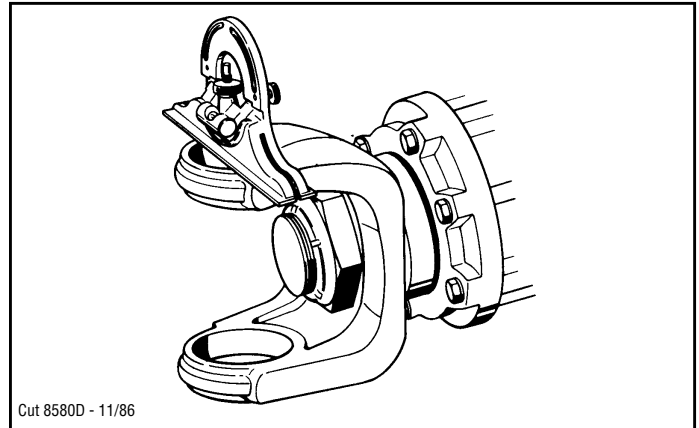

At the rear axle, take readings from a machined surface differential carrier that is in the same plane as the axle pinion shaft, or from machined surface that is perpendicular to pinion shaft, whichever is easier.

If vibration occurs while operating empty, take readings in empty condition. If it occurs when loaded, take readings when loaded.

When it is necessary to measure drive line lengths, measure from joint center to joint center.

### Limits


Manufacturer's specifications should be followed when making initial angularity check. Some manufacturers have found it necessary to vary from the ideal due to geometrical limitations. If vibration persists after adhering to manufacturer's specifications, contact the manufacturer's representative.

### Angularity Checks – Parallel Flanges or Yokes

1. Single Axle Vehicles
  - a. Transmission angle. Take reading of transmission angle. This angle is the angle to which the rear axle joint angle must match. The transmission angle will have a declination reading of from 0 to 5 degrees in most cases.

# DRIVELINE ANGULARITY (con't.)

## Angularity Checks Parallel Flanges or Yokes (con't)

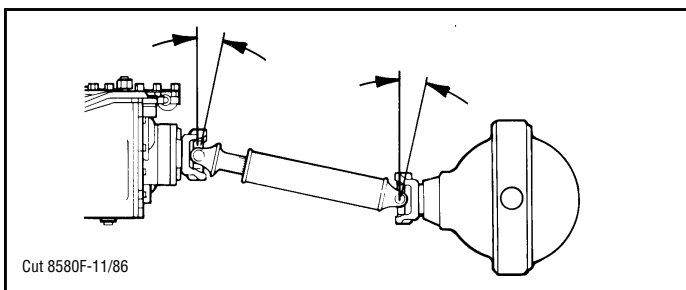

- b. Axle angle. Take reading either from machined surface of axle housing or pinion bearing retainer. **This angle must be within one degree of the transmission angle.**
- c. Example: If transmission angle reading is 3 degrees down to the rear, the rear axle angle should be 3 degrees up.

## 2. Tandem Axles or Vehicles with Auxiliary Units

- a. Take transmission angle reading.
- b. Take reading from joint of front tandem axle or auxiliary joint. **This reading should be within one degree of transmission angle. NOTE:** The rear joint of front tandem axle will be the same as the front joint.
- c. Take reading of joint angle at tandem rear axle, or axle to rear of auxiliary. **This angle must be within one degree of transmission angle.**

## Joint Working Angle Limits (Parallel)


Universal joints have a maximum working angle, depending on type and manufacture. It is recommended that the joint working angle for parallel joint assembly not exceed 8 degrees for main drive lines over 40" long. For main drive lines under 40" the maximum angle should not exceed Length (L) divided by 5. (This limit does not apply to interaxle drive lines.) **Example:** For a 35" drive line, the maximum joint working angle would be  $35 \div 5$  or  $7^\circ$ . This working angle must not be exceeded.

Place protractor on drive line to obtain angle of drive line from transmission to axle. The difference between the drive line angle and the joint angle is the joint working angle. For instance, if the transmission is 3 degrees down, and the drive line angle is down 7 degrees, the transmission joint working angle is 7 minus 3 or 4 degrees.

On tandem drive or auxiliary installations, take readings in the same manner, comparing the universal joint angles to the drive line angle to which it is attached.

## Angularity Checks - Non Parallel Compensating Angles or Flanges or Yokes

With short wheel base vehicles which have a minimum drive line length from transmission to axle, the drive line is required to operate through very severe working angles on some installations. This also applies to inter-axle drive lines. These severe joint working angles induce vibration.

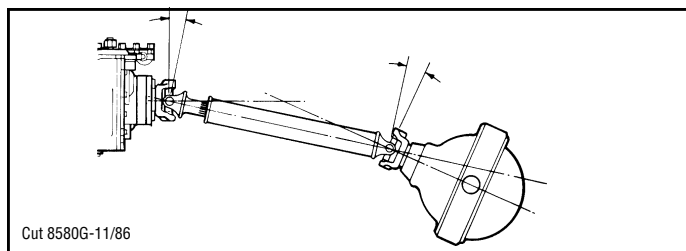

To decrease working angles, the axle is tilted upward until the pinion shaft centerline and transmission mainshaft centerline intersect midway between the joint centers.

**With tandem drive axles**, the rearward axle is tilted upward until its pinion shaft centerline and forward axle pinion shaft centerline intersect midway between joint centers.

When figuring non-parallel joint installations, it is necessary to take the drive line angle readings as well as transmission and axle angle readings.

## 1. Single Axle Vehicles

- a. Take angle reading of transmission.
- b. Take angle reading of drive line.
- c. Take angle reading of axle joint.
- d. To compute for correct angles:
  - (1) The difference between the drive line angle and the transmission angle will be the transmission joint working angle.
  - (2) The difference between the drive line angle and the axle angle will be the axle joint working angle.
  - (3) The two working angles of transmission and axle must be equal.
- e. **Example:**
  - Transmission is 3 degrees down.
  - Drive line is 7.5 degrees down.
  - Rear axle is 12 degrees down.
  - Thus 7.5 minus 3 equals 4.5 degrees.
  - 12 minus 7.5 equals 4.5 degrees giving 4.5, equal working angles.

# DRIVELINE ANGULARITY (con't.)

---

## Angularity Checks-Non Parallel Compensating Angles of Flanges or Yokes (con't)

### 2. Tandem Axles or Vehicles with Auxiliary Units

When taking readings on tandem drive axles or between auxiliary and rear axle, the same principles apply as with single axle vehicles. Take readings between transmission and front tandem axle, or auxiliary. Take readings between axles or between auxiliary and axle. In other words, take angle readings for each set of universal joints.

### Joint Working Angle Limit (Non-Parallel)

It is recommended that the maximum joint working angle for non-parallel joint assemblies not exceed the main drive line length divided by 10. For example, if the main drive line length is 55, the maximum joint working angle is  $55 \div 10$  or 5-1/2 degrees. (This limit does not apply to interaxle drive lines.)

### Axle Adjustments

Axle angles may generally be adjusted by one of the following ways, depending on the type of axle.

1. Adjust torque rods, if adjustable type.
2. Add to or reduce length of non-adjustable torque rods.
3. Add or reduce the number of shims behind torque rod brackets.
4. Use correct amount of wedge shims under spring to axle pad.

### Suspensions – Pinion Shaft Angle

There will be little or no change of axle pinion angle with types of suspensions which have a parallelogram movement. These allow differential housings to move up and down in a straight vertical during operation.

Suspensions not having a parallelogram movement will allow axle pinion shaft to oscillate in an arc, thereby constantly changing pinion shaft angle during operation. A varying amount of vibration can occur caused by working angles of the universal joints being momentarily unequal.

Single drive axle vehicles have little or no change of axle pinion angle during operation.

# PREVENTIVE MAINTENANCE



A good Preventive Maintenance (PM) program can avoid breakdowns, or reduce the cost or repairs. Often, transmission problems can be traced directly to poor maintenance.

Following is an inspection schedule that may be helpful in setting up a PM program. This schedule is not all inclusive as inspection intervals will vary depending upon operating conditions.

## Daily

### Air Tanks


Bleed air tanks to remove water or oil.

### Oil Leaks

Check around bearing covers, PTO covers and other machined surfaces. Also check for oil leakage on the ground before starting truck in the morning.

## Every 10,000 Miles

### Check Oil Level

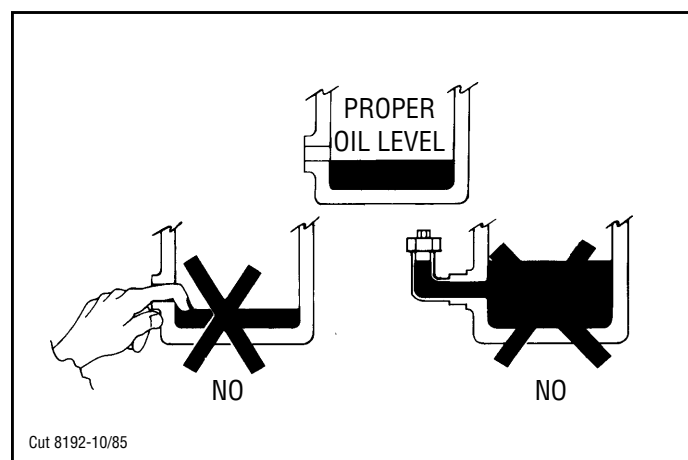


# PREVENTIVE MAINTENANCE (con't.)

## Every 20,000 Miles

### Air System and Connections


Check for leaks, worn hoses and air lines, loose connections and loose capscrews.

### Clutch Housing Mounting

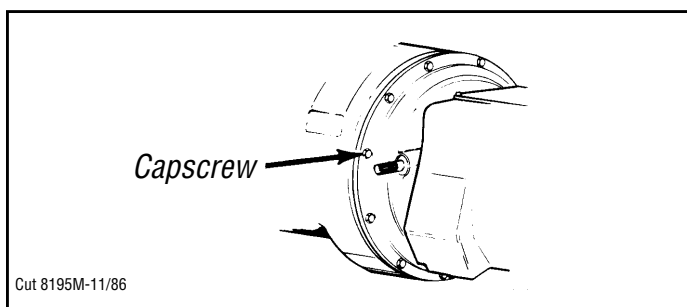


Check all capscrews in bolt circle of clutch housing for looseness.

### Lubricated Pedal Shafts

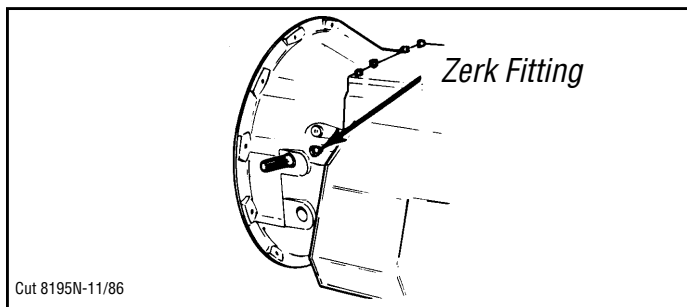

### Check Remote Control Linkage

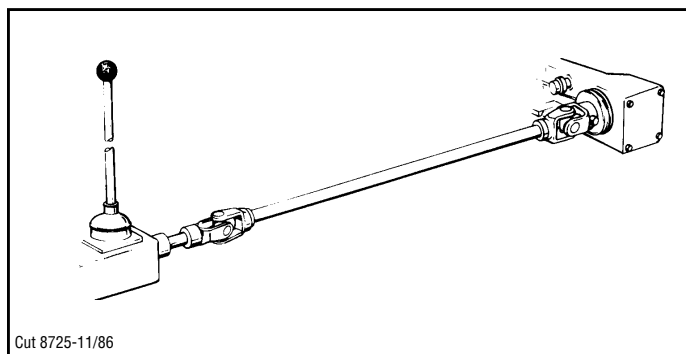


Check linkage U-joints for wear.

Check for binding.

Lubricate U-joints.


Check connections for tightness.

Check for bushing wear.

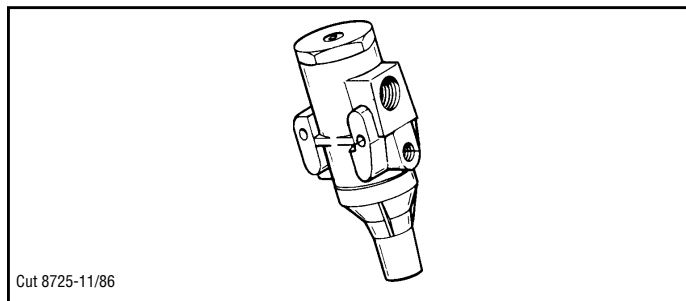

Check and clean or replace air filter element.

### Universal Joint Companion Flange

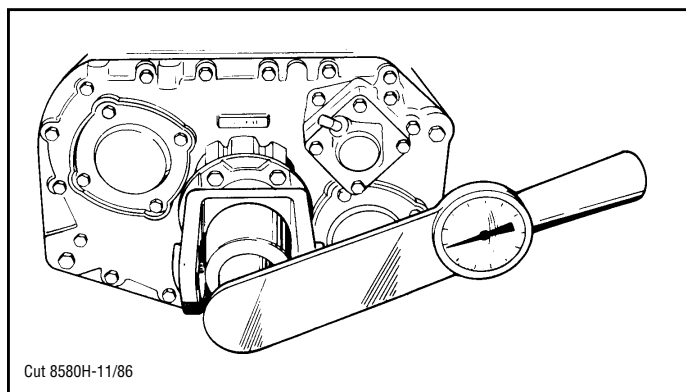

Check for proper torque, 450 to 500 lbs. ft. on twin countershaft models.

# PREVENTIVE MAINTENANCE (con't.)

---

## Every 20,000 Miles (con't)

### Output Shaft

Pry upward against output shaft to check radial clearance in mainshaft rear **bearing**.

Check splines for wear from movement and chucking action of the universal joint companion **flange**.

## Every \*50,000 Miles

### Change Transmission Lubricant

\*Initial fill on new units should be changed at 5,000 miles (see LUBRICATION).

## Every 40,000 Miles

### Inspect Clutch

**NOTE:** Inspection Should be Made According to Manufacturer's Specifications

### Clutch

Check clutch disc faces for wear.

Check dampening action of clutch driven plate.

### Release Bearing

Remove hand hole cover and check axial and radial clearance in release bearing.

Check relative position of thrust surface of release bearing with thrust sleeve on push type clutches.

# PREVENTIVE MAINTENANCE (con't.)

**Fuller®**

## Preventive Maintenance Recommendations

P,M, OPERATION	DAILY	5,000	10,000	20,000	30,000	40,000	50,000	60,000	70,000	80,000	90,000	100,000
Bleed Air Tanks and Listen for Leaks	X											
Inspect for Oil Leaks	X											
Check Oil Level			X	X	X	X	X	X	X	X	X	X
Inspect Air System Connections				X		X		X		X		X
Check Clutch Housing Capscrews for Looseness				X		X		X		X		X
Lube Clutch Pedal Shafts				X		X		X		X		X
Check Remote Control Linkage				X		X		X		X		X
Check and Clean or Replace Air Filter Element				X		X		X		X		X
Check Output Shaft for Looseness				X		X		X		X		X
Check Clutch Operation and Adjustment						X				X		
Change Transmission Oil		*X					X					X

\*Initial fill on new units. See LUBRICATION section.

**REPEAT SCHEDULE AFTER 100,00 MILES**

# LUBRICATION

## Proper Lubrication. . . the key to long transmission life

Proper lubrication procedures are the key to a good all-around maintenance program. If the oil is not doing its job, or if the oil level is ignored, all the maintenance procedures in the world are not going to keep the transmission running or assure long transmission life.

Eaton® Fuller® Transmissions are designed so that the internal parts operate in a bath of oil circulated by the motion of gears and shafts.

Thus, all parts will be amply lubricated if these procedures are closely followed:

1. Maintain oil level. Inspect regularly.
2. Change oil regularly.
3. Use the correct grade and type of oil.
4. Buy from a reputable dealer.

### Lubrication Change and Inspection

Eaton® Roadranger® CD50 Transmission Fluid	
HIGHWAY USE-Heavy Duty and Mid.Range	
First 3,000 to 5,000 miles (4827 to 8045 Km)	Factory fill initial drain.
Every 10,000 miles (16090 Km)	Check fluid level. Check for leaks.
Heavy Duty Highway Change Interval	
Every 250,000 miles (402336 km)	Change transmission fluid.
Mid.Range Highway Change Interval	
Every 100,000 miles (160,000 Km) or every 3 years whichever occurs first.	Change transmission fluid.
OFF-HIGHWAY USE	
First 30 hours	Factory fill initial drain.
Every 40 hours	Inspect fluid level. Check for leaks.
Every 500 hours	Change transmission fluid where severe dirt conditions exist.
Every 1,000 hours	Change transmission fluid (Normal off-highway use).
Heavy Duty Engine Lubricant or Mineral Gear Lubricant	
HIGHWAY USE	
First 3,000 to 5,000 miles (4827 to 8045 Km)	Factory fill initial drain.
Every 10,000 miles (16090 Km)	Inspect lubricant level. Check for leaks.
Every 50,000 miles (80450 Km)	Change transmission lubricant.
OFF-HIGHWAY USE	
First 30 hours	Change transmission lubricant on new units.
Every 40 hours	Inspect lubricant level. Check for leaks.
Every 500 hours	Change transmission lubricant where severe dirt conditions exist.
Every 1,000 hours	Change transmission lubricant (Normal off-highway use).

Change the oil filter when fluid or lubricant is changed.


### Recommended Lubricants

Type	Grade (SAE)	Fahrenheit (Celsius) Ambient Temperature
Eaton® Roadranger® CD50 Transmission Fluid	50	All
Heavy Duty Engine Oil MIL-L-2104B, C or D or API-SF or Api-CD (Previous API designations acceptable)	50 40 30	Above 10°F(-12°C.) Above 10°F(-12°C.) Below 10°F(-12°C.)
Mineral Gear Oil with rust and oxidation inhibitor API-GL-1	90 80W	Above 10°F(-12°C.) Below 10°F(-12°C.)

**The use of mild EP gear oil or multi-purpose gear oil is not recommended, but if these gear oils are used, be sure to adhere to the following limitations:**

Do not use mild EP gear oil or multi purpose gear oil when operating temperatures are above 230°F (110°C). Many of these gear oils, particularly 85W140, break down above 230°F and coat seals, bearings and gears with deposits that may cause premature failures. If these deposits are observed (especially a coating on seal areas causing oil leakage), change to Eaton Roadranger CD50 transmission fluid, heavy duty engine oil or mineral gear oil to assure maximum component life and to maintain your warranty with Eaton. (Also see "Operating Temperatures".)

Additives and friction modifiers are not recommended for use in Eaton Fuller transmissions.



### Proper Oil Level

Make sure oil is level with filler opening. Because you can reach oil with your finger does not mean oil is at proper level. **One inch of oil level is about one gallon of oil.**

### Draining Oil

Drain transmission while oil is warm. To drain oil remove the drain plug at bottom of case. Clean the drain plug before re-installing.

### Refilling

Clean case around filler plug and remove plug from side of case. Fill transmission to the level of the filler opening. If transmission has two filler openings, fill to level of both openings.

The exact amount of oil will depend on the transmission inclination and model. Do not over fill this will cause oil to be forced out of the transmission

When adding oil, types and brands of oil should not be mixed because of possible incompatibility.



# LUBRICATION (con' t.)

## Operating Temperatures – With Eaton® Roadranger® CD50 Transmission Fluid Heavy Duty Engine Oil and Mineral Oil

The transmission should not be operated consistently at temperatures above 250°F (120°C). However, intermittent operating temperatures to 300°F (149°C) will not harm the transmission. Operating temperatures above 250°F increase the lubricant's rate of oxidation and shorten its effective life. When the average operating temperature is above 250°F, the transmission may require more frequent oil changes or external cooling.

The following conditions in any combination can cause operating temperatures of over 250°F: (1) operating consistently at slow speeds, (2) high ambient temperatures, (3) restricted air flow around transmission, (4) exhaust system too close to transmission, (5) high horsepower, overdrive operation.

External oil coolers are available to reduce operating temperatures when the above conditions are encountered.

Transmission Oil Coolers are:

### Recommended

- With engines of 350 H.P. and above with overdrive transmissions

### Required

- With engines 399 H.P. and above with overdrive transmissions and GCW's over 90,000 lbs.
- With engines 399 H.P. and above and 1400 Lbs.-Ft. or greater torque
- With engines 450 H.P. and above

### -With ED or Multipurpose Gear Oil

Mild EP gear oil and multipurpose gear oil are not recommended when lubricant operating temperatures are above 230°F (110°C). In addition, transmission oil coolers are not recommended with these gear oils since the oil cooler materials may be attacked by these gear oils. **The lower temperature limit and oil cooler restriction with these gear oils generally limit their success to milder applications.**

## Proper Lubrication Levels as Related to Transmission Installation Angles.


If the transmission operating angle is more than 12 degrees, improper lubrication can occur. The operating angle is the transmission mounting angle in the chassis plus the percent of upgrade (expressed in degrees).

The chart below illustrates the safe percent of upgrade on which the transmission can be used with various chassis mounting angles. For example: if you have a 4 degree transmission mounting angle, then 8 degrees (or 14 percent of grade) is equal to the limit of 12 degrees. If you have a 0 degree mounting angle, the transmission can be operated on a 12 degree (21 percent) grade.

Anytime the transmission operating angle of 12 degrees is exceeded for an extended period of time the transmission should be equipped with an oil pump or cooler kit to insure proper lubrication.


Note on the chart the effect low oil levels can have on safe operating angles. Allowing the oil level to fall 1/2" below the filler plug hole reduces the degree of grade by approximately 3 degrees (5.5 percent).

## Proper Lubrication Levels are Essential!

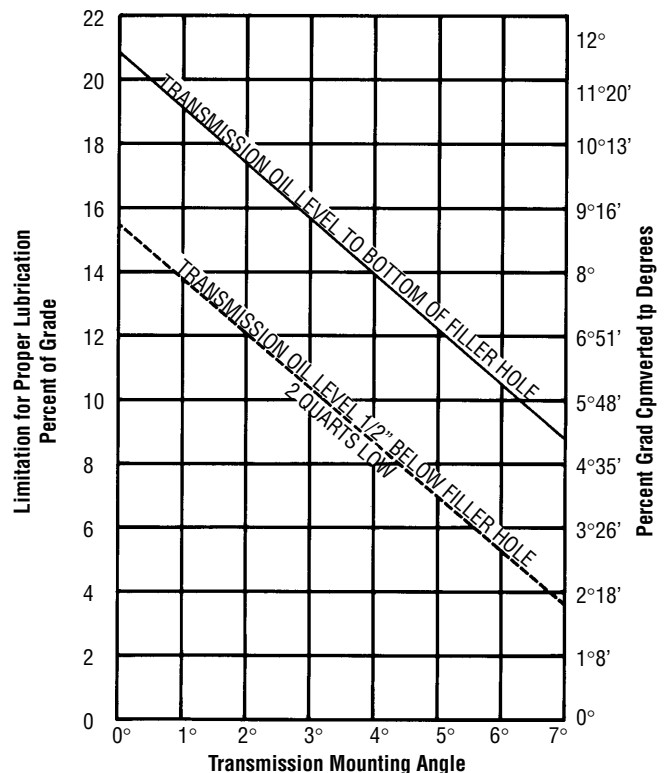


Dotted line showing "2 Quarts Low" is for reference only. Not recommended.

# TORQUE RECOMMENDATIONS

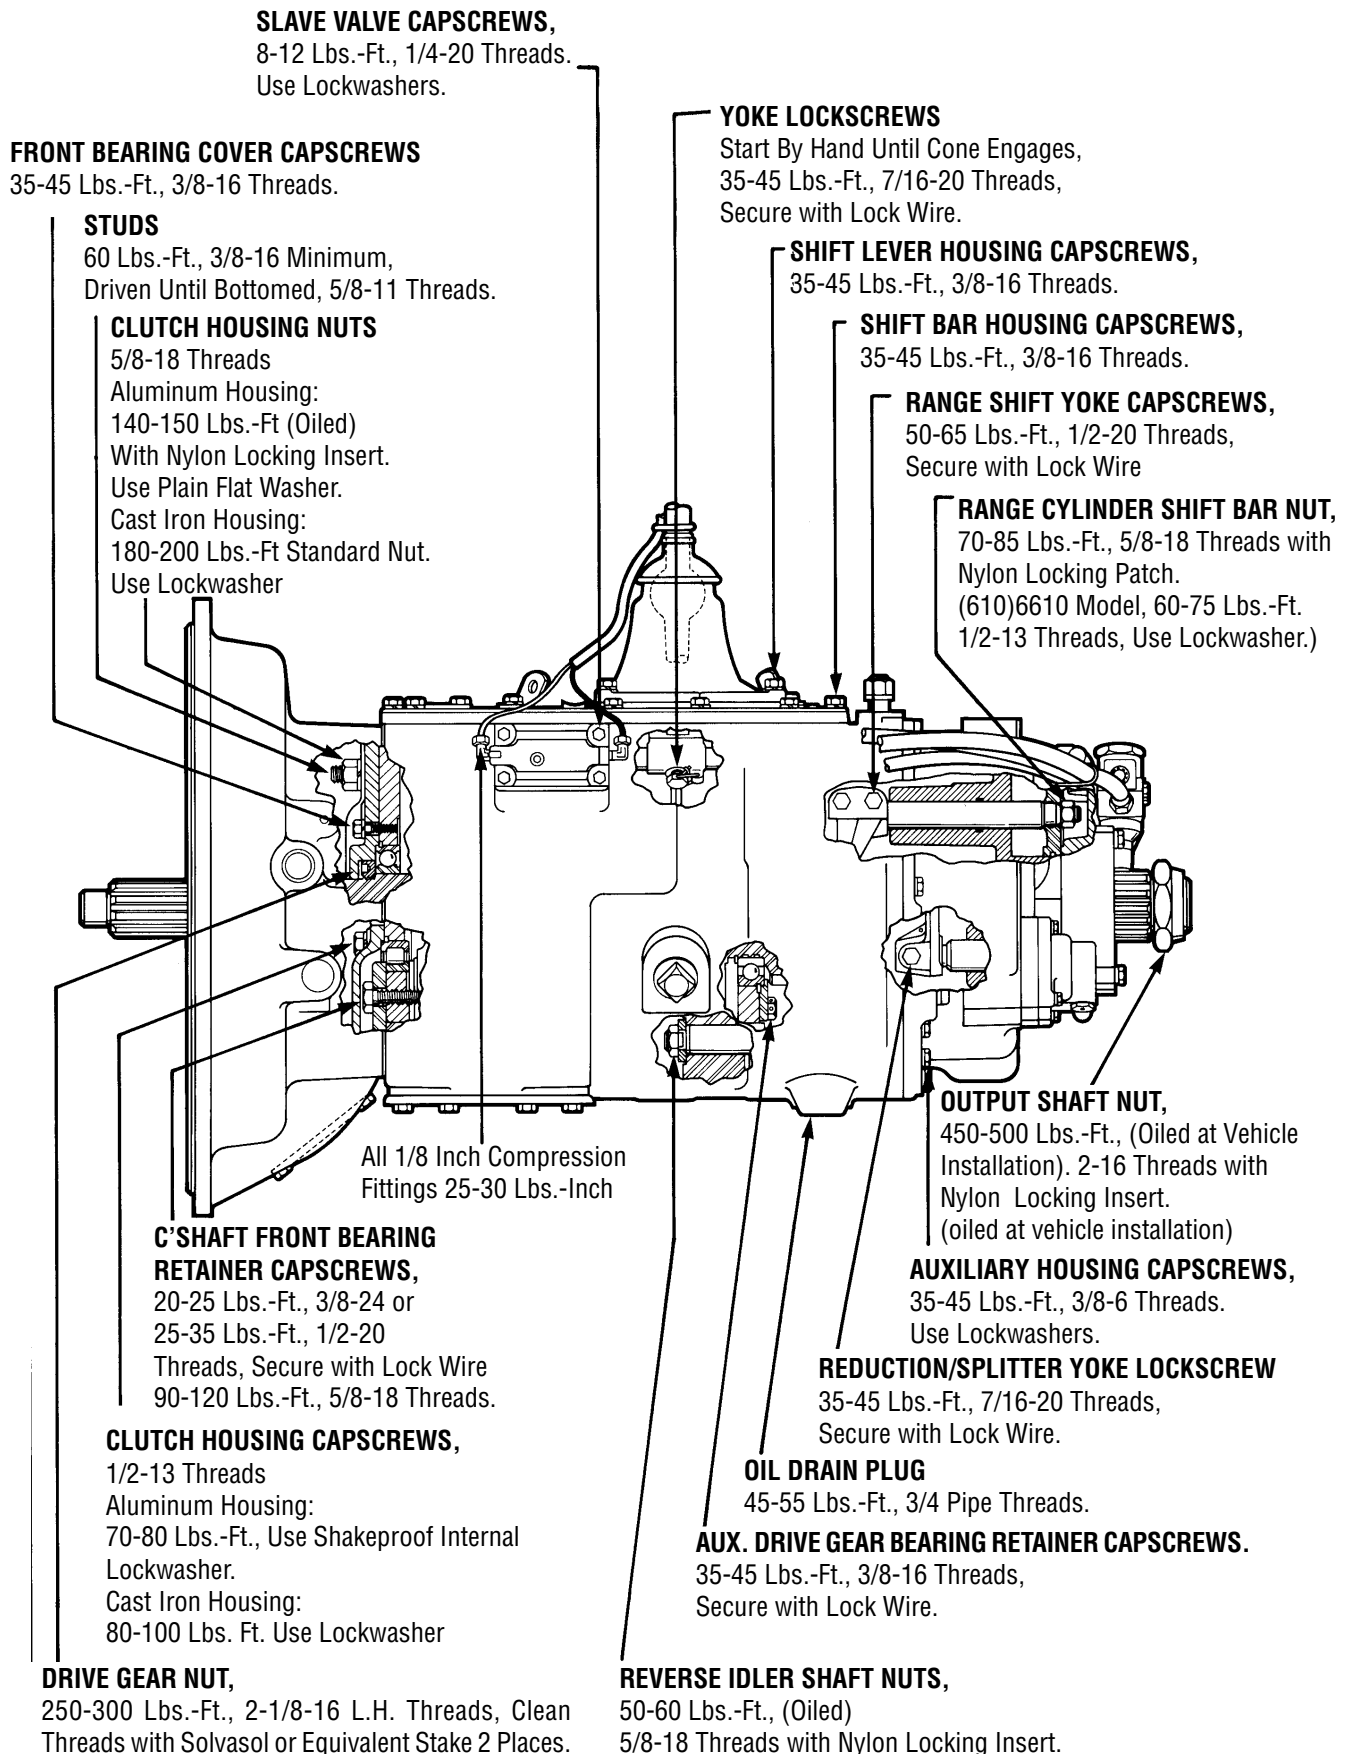

# TORQUE RECOMMENDATIONS (con't.)

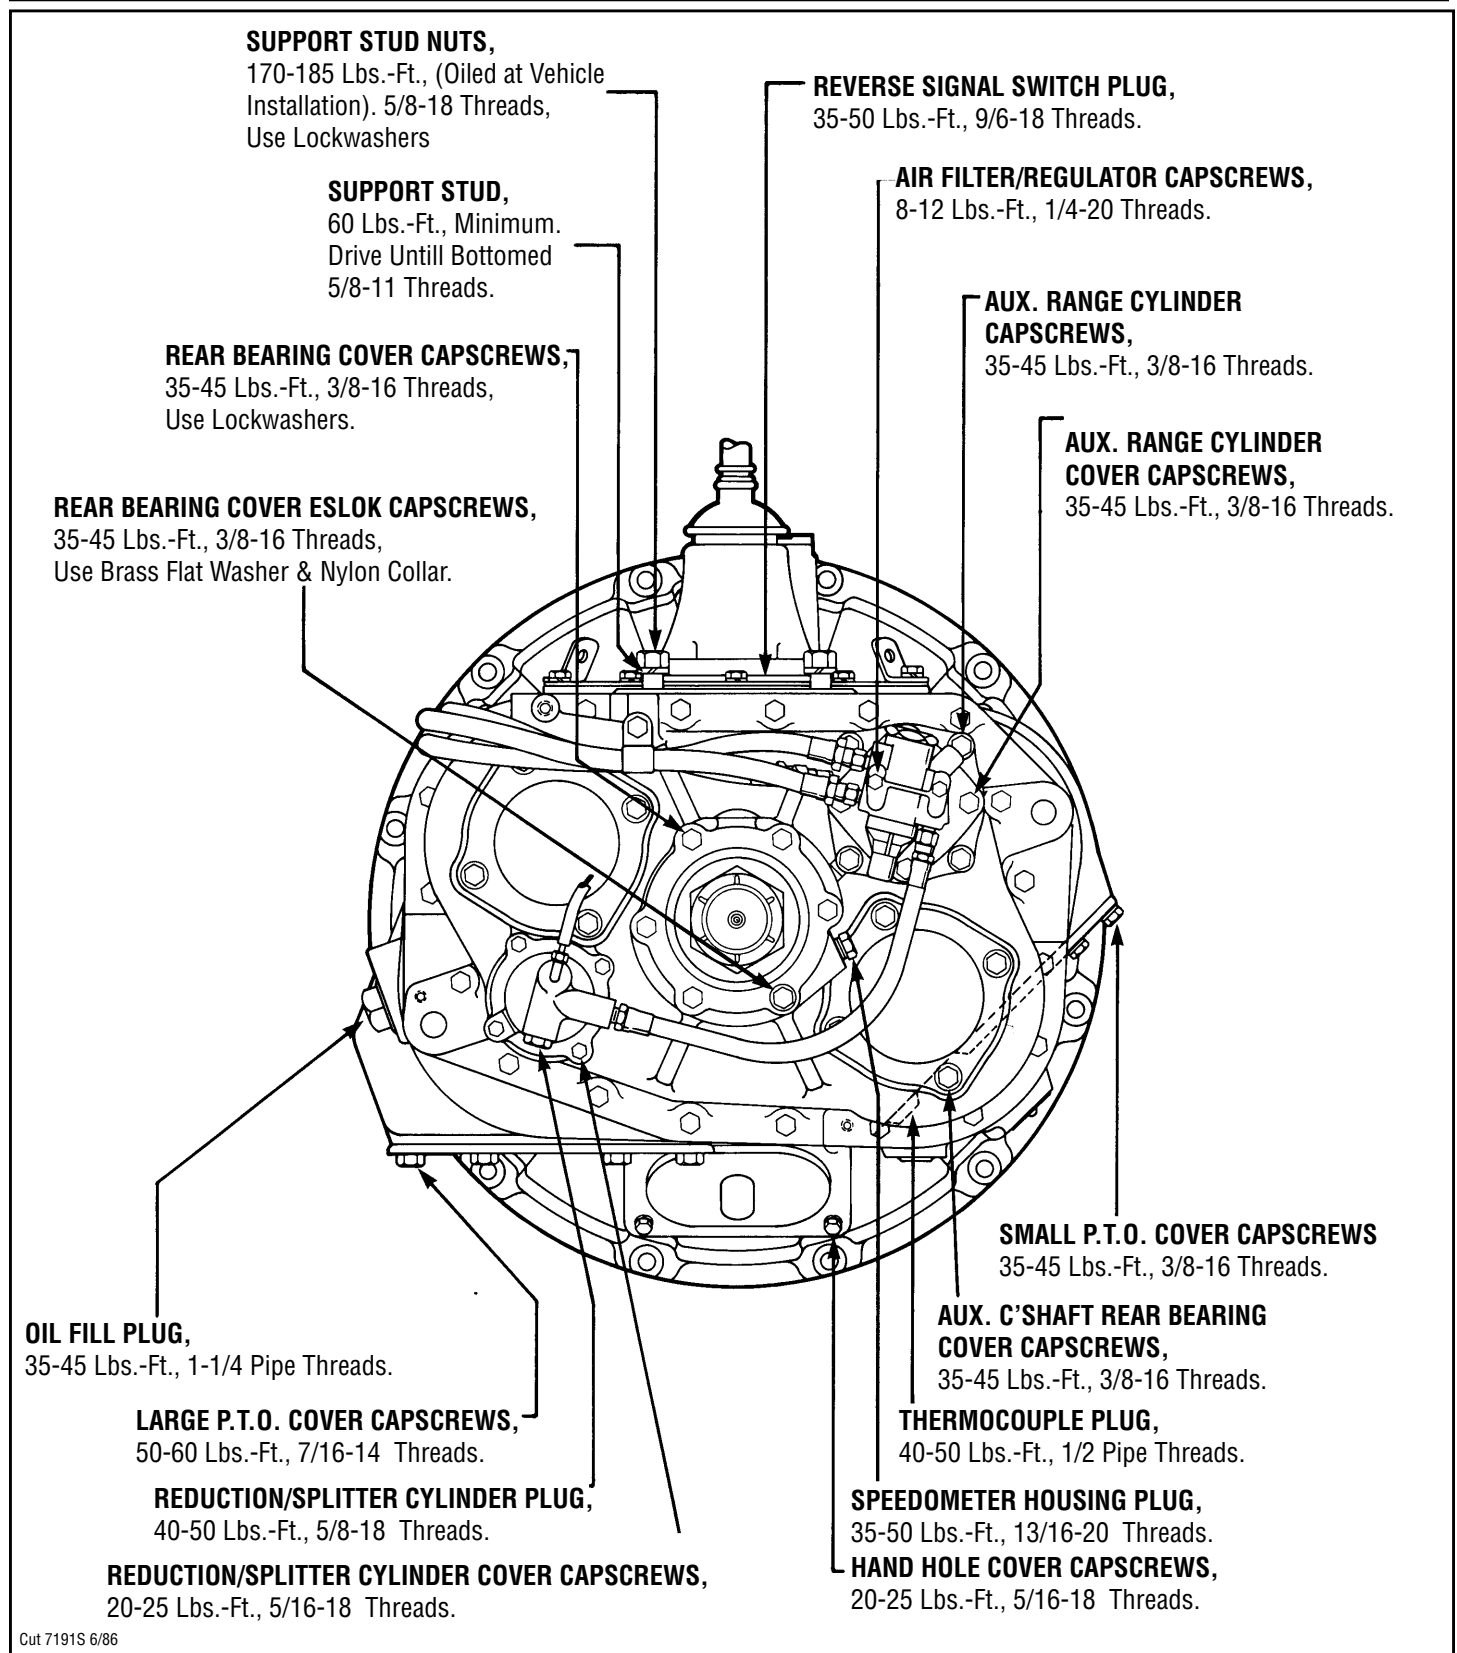

## THREAD SEALING INSTRUCTIONS

- Capscrews**-Apply Loctite 242
- Drove Gear Nut, Clutch Housing Studs, and Support Studs**-Apply Thread Sealant (Fuller Part No. 71204)
- Tapered Threads (Pipe Threads) and Airline Fittings**-Apply-Hydraulic Sealant (Fuller Part No. 71205)

# TROUBLESHOOTER'S GUIDELINE

Following is a basic procedure guideline for troubleshooting transmissions:

## 1. Preliminary Inspection.

- Personal Observation – look for signs of misuse such as broken mounts, fittings or brackets; check air lines.
- Question the Owner or Operator – gather information on operating conditions and vehicle use, on history of problem, and on shifting characteristics if affected.
- Gather History of Unit – including maintenance and lubrication procedures, past failures, and mileage or hours of use.

## 2. Disassemble Transmission.

- Keep oil sample for impurities, check if needed.
- During disassembly, check for incorrectly installed parts, missing parts, and nongenuine parts.
- Clean and inspect each piece closely.

## 3. Determine Type of Failure.

## 4. Determine and correct Cause of Failure.

### To Use Guide Line Chart

The Troubleshooter's Guideline chart is used to locate and correct transmission problems.

To use the guideline, 1) Locate the transmission problem in the left hand column; 2) Trace line horizontally across the page until a rectangle with a number in it is reached; 3) Trace up vertical column to find a possible cause. The number in the intersection of the vertical and horizontal lines tell which corrections to use; 4) Possible corrections are listed below. There may be more than one possible cause and possible correction for each problem.

### POSSIBLE CORRECTIONS

- Instruct driver on proper driving techniques.
- Replace parts. (After trying other listed possible corrections)
- Loosen lockscrew and retighten to proper torque.
- Look for resultant damage.
- Smooth with emery paper.
- Reset to proper specifications.
- Install missing parts.
- Check air lines or hoses.
- Tighten part.
- Correct the restriction.
- Recheck timing.
- Clean part.
- Apply thin film silicone.
- Apply sealant.

PROBLEM	POSSIBLE CAUSE									
	WORN YOKE PADS	BENT YOKE BAR	WEAK OR MISSING DETENT SPRING	BURR ON YOKE BAR	INTERLOCK BALL OR PIN MISSING	TOO STRONG DETENT SPRING	CRACKED SHIFT BAR HOUSING	BREATHER HOLE PLUGGED	DAMAGED INSERT	DEFECTIVE REGULATOR
SLIP OUT (SPLITTER)	1 2								2	2
SLIP OUT (RANGE)									2	9
SLIP OUT OR JUMP OUT (FRONT SECTION)	2		2 7							
SLOW SHIFT (SPLITTER)									2	2
SLOW SHIFT OR WON'T SHIFT (RANGE)									2	9
HARD SHIFT OR WON'T SHIFT (FRONT SECTION)		2 3		5		2	2			
ABLE TO SHIFT FRONT SECTION INTO 2 GEARS AT ONCE					7					
GRINDING ON INITIAL LEVER ENGAGEMENT	2									
LEVER LOCKS UP OR STICKS IN GEAR										
NOISE										
GEAR RATTLE AT IDLE										
VIBRATION										
BURNED MAINSHAFT WASHER										
INPUT SHAFT SPLINES WORN OR INPUT SHAFT BROKEN										
CRACKED CLUTCH HOUSING										
BROKEN AUXILIARY HOUSING										
BURNED SYNCHRONIZER									2	
BROKEN SYNCHRONIZER										
HEAT										
TWISTED MAINSHAFT										
DRIVE SET DAMAGED										
BURNED BEARING										
OIL LEAKAGE								10		
OVERLAPPING GEAR RATIOS										



# CONVERSION TABLE

## Decimal Equivalents

1/64 ..... .015625	17/64 ..... .265625	33/64 ..... .515625	49/64 ..... .765625
1/32 ..... .03125	9/32 ..... .28125	17/32 ..... .53125	25/32 ..... .78125
3/64 ..... .046875	19/64 ..... .296875	35/64 ..... .546875	51/64 ..... .796875
1/16 ..... .0625	5/16 ..... .3125	9/16 ..... .5625	13/16 ..... .8125
5/64 ..... .078125	21/64 ..... .328125	37/64 ..... .578125	53/64 ..... .828125
3/32 ..... .09375	11/32 ..... .34375	19/32 ..... .59375	27/32 ..... .84375
7/64 ..... .109375	23/64 ..... .359375	39/64 ..... .609375	55/64 ..... .859375
1/8 ..... .125	3/8 ..... .375	5/8 ..... .625	7/8 ..... .875
9/64 ..... .140625	25/64 ..... .390625	41/64 ..... .640675	57/64 ..... .890625
5/32 ..... .15625	13/32 ..... .40625	21/32 ..... .65625	29/32 ..... .90625
11/64 ..... .171875	27/64 ..... .421875	43/64 ..... .671875	59/64 ..... .921875
3/16 ..... .1875	7/16 ..... .4375	11/16 ..... .6875	15/16 ..... .9375
13/64 ..... .203125	29/64 ..... .453125	45/64 ..... .703125	61/64 ..... .953125
7/32 ..... .21875	15/32 ..... .46875	23/32 ..... .71875	31/32 ..... .96875
15/64 ..... .234375	31/64 ..... .484375	47/64 ..... .734375	63/64 ..... .984375
1/4 ..... .25	1/2 ..... .5	3/4 ..... .75	1 ..... 1.0

## Metric Conversions

1 mile = 1.609 kilometers (Km)
1 inch = 25.4 millimeters (mm)
1 pound = 0.453 kilograms (Kg)
1 pint = 0.473 liters (l)
1 pounds · feet = 1.356 Newton/Meters (N.m)

## Metric Equivalents

MM	In.	MM	In.	MM	In.	MM	In.	MM	In.	MM	In.	MM	In.
1 ..... .0394	21 ..... .8268	41 ..... .16142	61 ..... .24016	81 ..... .31890	105 ..... .41339	205 ..... .80709							
2 ..... .0787	22 ..... .8661	42 ..... .16535	62 ..... .24409	82 ..... .32283	110 ..... .43307	210 ..... .82677							
3 ..... .1181	23 ..... .9055	43 ..... .16929	63 ..... .24803	83 ..... .32677	115 ..... .45276	215 ..... .84646							
4 ..... .1575	24 ..... .9449	44 ..... .17323	64 ..... .25197	84 ..... .33071	120 ..... .47244	220 ..... .86614							
5 ..... .1969	25 ..... .9843	45 ..... .17717	65 ..... .25591	85 ..... .33565	125 ..... .49213	225 ..... .88583							
6 ..... .2362	26 ..... .10236	46 ..... .18110	66 ..... .25984	86 ..... .33858	130 ..... .51181	230 ..... .90551							
7 ..... .2756	27 ..... .10630	47 ..... .18504	67 ..... .26378	87 ..... .34252	135 ..... .53150	235 ..... .92520							
8 ..... .3150	28 ..... .11024	48 ..... .18898	68 ..... .26772	88 ..... .34646	140 ..... .55118	240 ..... .94488							
9 ..... .3543	29 ..... .11417	49 ..... .19291	69 ..... .27165	89 ..... .35039	145 ..... .57087	245 ..... .96457							
10 ..... .3937	30 ..... .11811	50 ..... .19685	70 ..... .27559	90 ..... .35433	150 ..... .59055	250 ..... .98425							
11 ..... .4331	31 ..... .12205	51 ..... .20079	71 ..... .27953	91 ..... .35827	155 ..... .61024	255 ..... .10.0394							
12 ..... .4724	32 ..... .12598	52 ..... .20472	72 ..... .28346	92 ..... .36220	160 ..... .62992	260 ..... .10.2362							
13 ..... .5118	33 ..... .12992	53 ..... .20866	73 ..... .28740	93 ..... .36614	165 ..... .64961	265 ..... .10.4331							
14 ..... .5512	34 ..... .13386	54 ..... .21260	74 ..... .29134	94 ..... .37008	170 ..... .66929	270 ..... .10.6299							
15 ..... .5906	35 ..... .13780	55 ..... .21654	75 ..... .29528	95 ..... .37402	175 ..... .68898	275 ..... .10.8268							
16 ..... .6299	36 ..... .14173	56 ..... .22047	76 ..... .29921	96 ..... .37795	180 ..... .70866	280 ..... .11.0236							
17 ..... .6693	37 ..... .14567	57 ..... .22441	77 ..... .30315	97 ..... .38189	185 ..... .72835	285 ..... .11.2205							
18 ..... .7087	38 ..... .14961	58 ..... .22835	78 ..... .30709	98 ..... .38583	190 ..... .74803	290 ..... .11.4173							
19 ..... .7480	39 ..... .15354	59 ..... .23228	79 ..... .31102	99 ..... .38976	195 ..... .76772	295 ..... .11.6142							
20 ..... .7874	40 ..... .15748	60 ..... .23622	80 ..... .31496	100 ..... .39370	200 ..... .78740	300 ..... .11.8110							

## Metric Conversion Factors

Approximate Conversions to Metric Measures				
Symbol	When You Know	Multiply by	To Find	Symbol
LENGTH				
in	inches	*2.5	centimeters	cm
ft	feet	30	centimeters	cm
yd	yards	0.9	meters	m
mi	miles	1.6	kilometers	km
AREA				
in²	square inches	6.5	square centimeters	cm²
ft²	square feet	0.09	square meters	m²
yd²	square yards	0.8	square meters	m²
m²	square miles	2.6	square kilometers	km²
	acres	0.4	hectares	ha
MASS (weight)				
oz	ounces	28	grams	g
lb	pounds	0.45	kilograms	kg
	short tons (2000 lb)	0.9	tonnes	t
VOLUME				
tsp	teaspoons	5	milliliters	ml
Tbsp	tablespoons	15	milliliters	ml
fl oz	fluid ounces	30	milliliters	ml
c	cups	0.24	liters	l
pt	pints	0.47	liters	l
qt	quarts	0.95	liters	l
gal	gallons	3.8	liters	l
ft³	cubic feet	0.03	cubic feet	m³
yd³	cubic yards	0.76	cubic meters	m³
TEMPERATURE (exact)				
°F	Fahrenheit temperature	5/9 (after subtracting 32)	Celsius temperature	°C

Approximate Conversions to Metric Measures				
Symbol	When You Know	Multiply by	To Find	Symbol
LENGTH				
mm	millimeters	0.04	inches	in
cm	centimeters	0.4	inches	in
m	meters	3.3	feet	ft
m	meters	1.1	yards	yd
km	kilometers	0.6	miles	mi
AREA				
cm²	square centimeters	0.16	square inches	in²
m²	square meters	1.2	square yards	yd²
km²	square kilometers	0.4	square miles	m²
ha	hectares (10,000 m²)	2.5	acres	
MASS (weight)				
g	gram	0.035	ounces	oz
kg	kilograms	2.2	pounds	lb
t	tonnes (1000 kg)	1.1	short tons	
VOLUME				
ml	milliliters	0.03	fluid ounces	fl oz
l	liters	2.1	pints	pt
l	liters	1.06	quarts	qt
l	liters	0.46	gallons	gal
m³	cubic meters	35	cubic feet	ft³
m³	cubic meters	1.3	cubic yards	yd³
TEMPERATURE (exact)				
°C	Celsius temperature	9/5 (then add 32)	Fahrenheit temperature	°F

°F

−40

0

32

40

80

98.6

120

160

200

212

°C

−40

−20

0

20

37



40

60

80

100

# TOWING OR COASTING

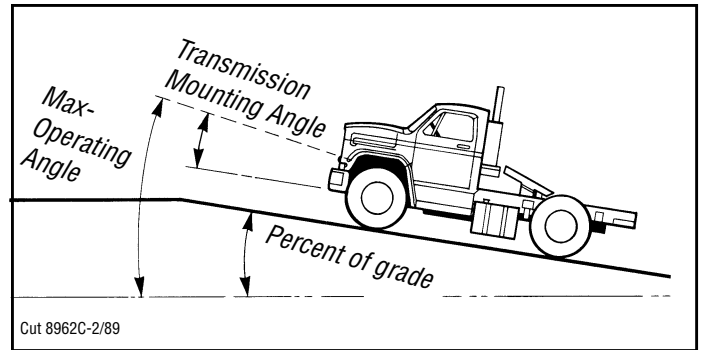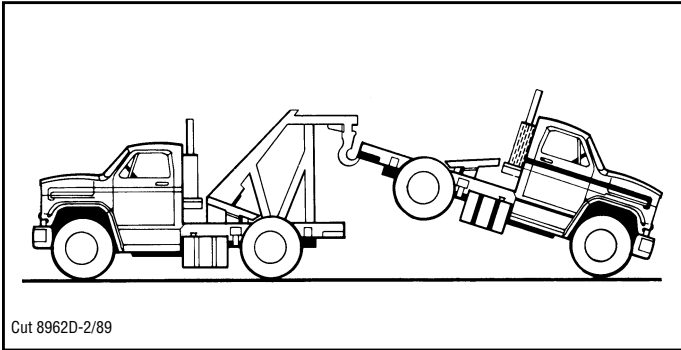

Fuller transmissions require rotation of the front section countershaft and mainshaft gears to provide adequate lubrication. These gears do not rotate when the vehicle is towed with the rear wheels on the ground and the drive train connected. The main-shaft, however, is driven at a high rate of speed by the rear wheels. The friction between the mainshaft splined washers, due to the lack of lubrication and the extreme difference in rotational speeds, will severely damage the transmission. Coasting with the transmission in neutral will produce the same damage.

## To prevent this kind of damage:

**Never coast with the transmission in neutral.**

**Never coast with the clutch depressed.**

**When towing, pull the axle shafts, or disconnect the drive line, or tow with the drive wheels off the ground.**

[illegible]





Copyright Eaton Corporation, 2012.  
Eaton hereby grant their customers,  
vendors, or distributors permission  
to freely copy, reproduce and/or  
distribute this document in printed  
format. It may be copied only in  
its entirety without any changes or  
modifications. THIS INFORMATION  
IS NOT INTENDED FOR SALE OR  
RESALE, AND THIS NOTICE MUST  
REMAIN ON ALL COPIES.

**Note:** Features and specifications  
listed in this document are subject to  
change without notice and represent  
the maximum capabilities of the  
software and products with all options  
installed. Although every attempt has  
been made to ensure the accuracy of  
information contained within, Eaton  
makes no representation about the  
completeness, correctness or accuracy  
and assumes no responsibility for  
any errors or omissions. Features and  
functionality may vary depending on  
selected options.

**For spec'ing or service assistance,  
call 1-800-826-HELP (4357) or visit  
[www.eaton.com/roadranger](http://www.eaton.com/roadranger).  
In Mexico, call 001-800-826-4357.**

Roadranger: Eaton and trusted partners  
providing the best products and services in the  
industry, ensuring more time on the road.

**Eaton Corporation**

Vehicle Group  
P.O. Box 4013  
Kalamazoo, MI 49003 USA  
800-826-HELP (4357)  
[www.eaton.com/roadranger](http://www.eaton.com/roadranger)

Printed in USA